

 
DECOWOOD®

MUEBLE TV ELLEN MEUBLE TV ELLEN


INSTRUCCIONES DE MONTAJE
ASSEMBLING INSTRUCTIONS
INSTRUCTIONS D'ASSEMBLAGE



PARTES DEL MUEBLE
UNIT PARTS
PARTIES DU MEUBLE


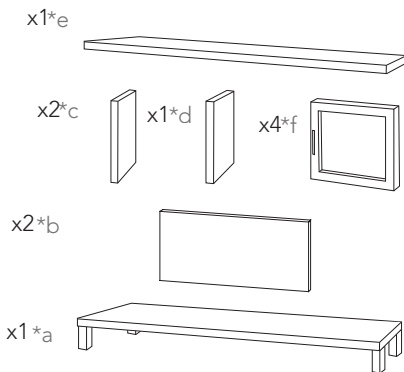


 HERRAJES Y PIEZAS
IRON FITTINGS AND PIECES
FERRURES ET PIÈCES


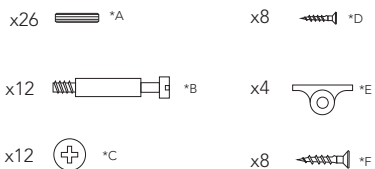


MONTAJE
ASSEMBLING
MONTAGE

 
 
① 9x A
6x B

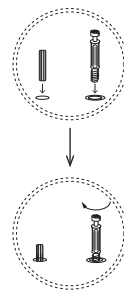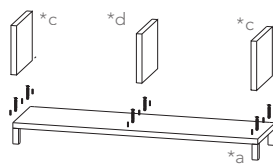

② 6x C

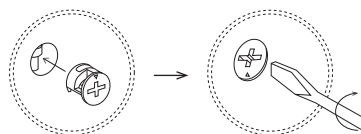  


③ 4x A

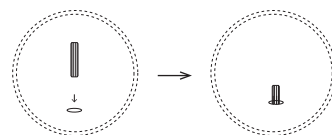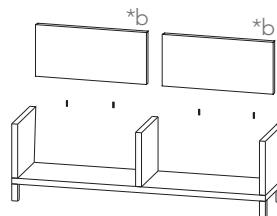  


DECOWOOD®

MUEBLE TV ELLEN MEUBLE TV ELLEN

 
4 13xA
6xB

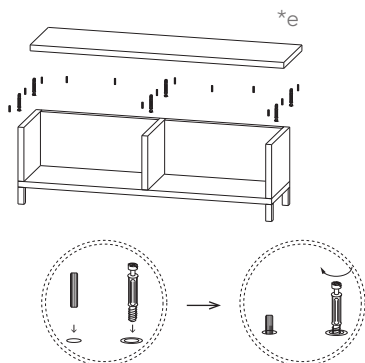


5 6xC

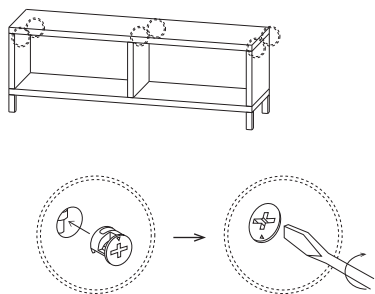 


6 4xD

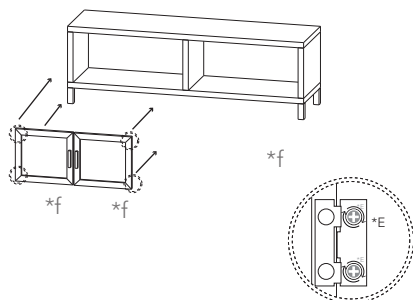 

7 4xD

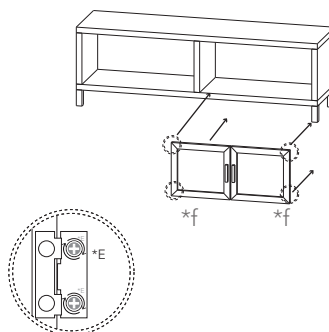 

8 4x E
8x F

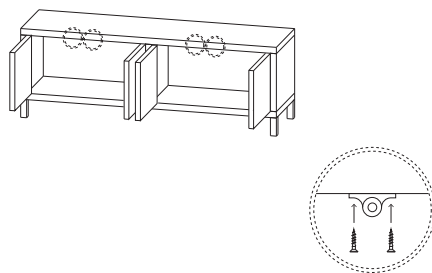 

9

