

 
# DECOWOOD®

## MUEBLE TV ELLEN MEUBLE TV ELLEN

INSTRUCCIONES DE MONTAJE  
ASSEMBLING INSTRUCTIONS  
INSTRUCTIONS D'ASSEMBLAGE



PARTES DEL MUEBLE  
UNIT PARTS  
PARTIES DU MEUBLE


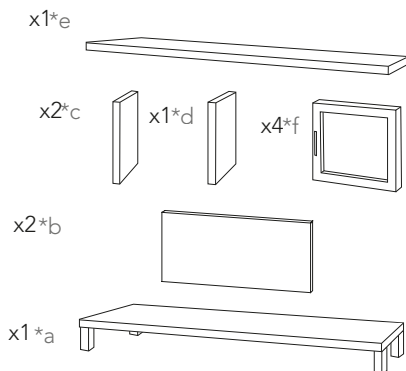


HERRAJES Y PIEZAS  
IRON FITTINGS AND PIECES  
FERRURES ET PIÈCES



- x26 \*A
- x12 \*B
- x12 \*C
- x16 \*D

MONTAJE  
ASSEMBLING  
MONTAGE

 
 
① 9xA  
6xB

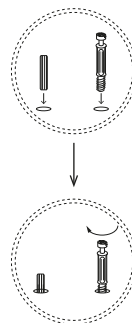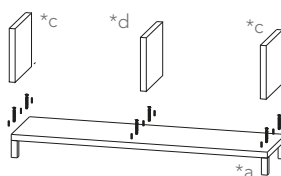

② 6xC

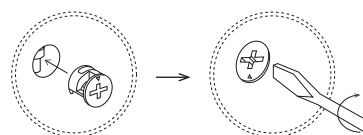  



③ 4xA

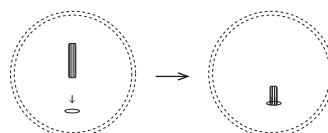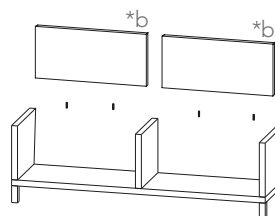  



# DECOWOOD®

## MUEBLE TV ELLEN MEUBLE TV ELLEN

 
 
4 13xA  
6xB

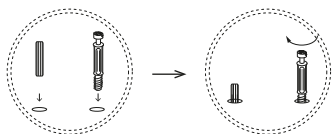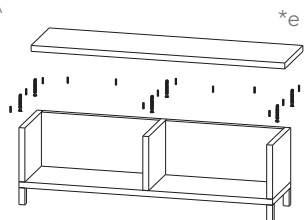

5

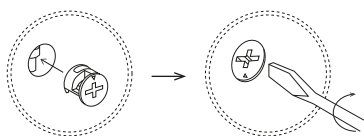  

6 8x D

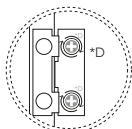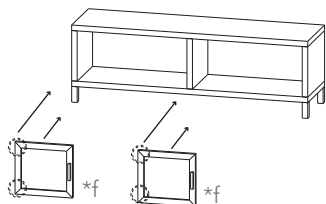  

7 8x D

