

 
DECOWOOD®

MUEBLE TV FRIDA MEUBLE TV FRIDA


INSTRUCCIONES DE MONTAJE
ASSEMBLING INSTRUCTIONS
INSTRUCTIONS D'ASSEMBLAGE




PARTES DEL MUEBLE
UNIT PARTS
PARTIES DU MEUBLE

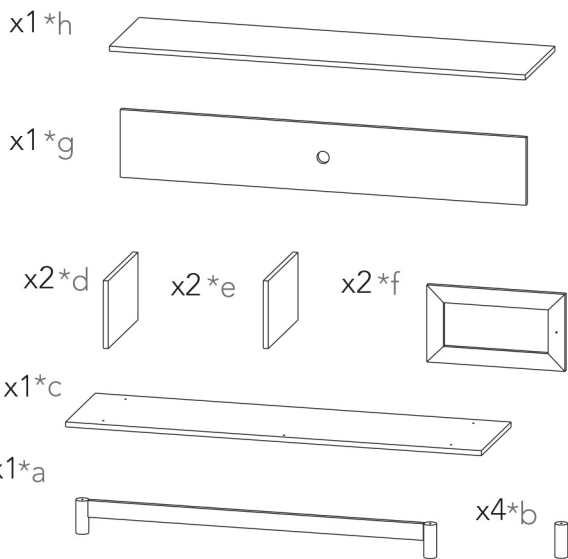

 HERRAJES Y PIEZAS
IRON FITTINGS AND PIECES
FERRURES ET PIÈCES

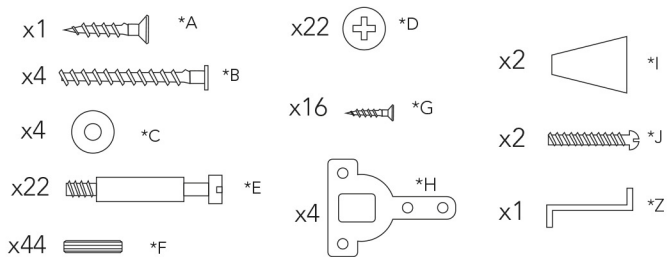



MONTAJE
ASSEMBLING
MONTAGE

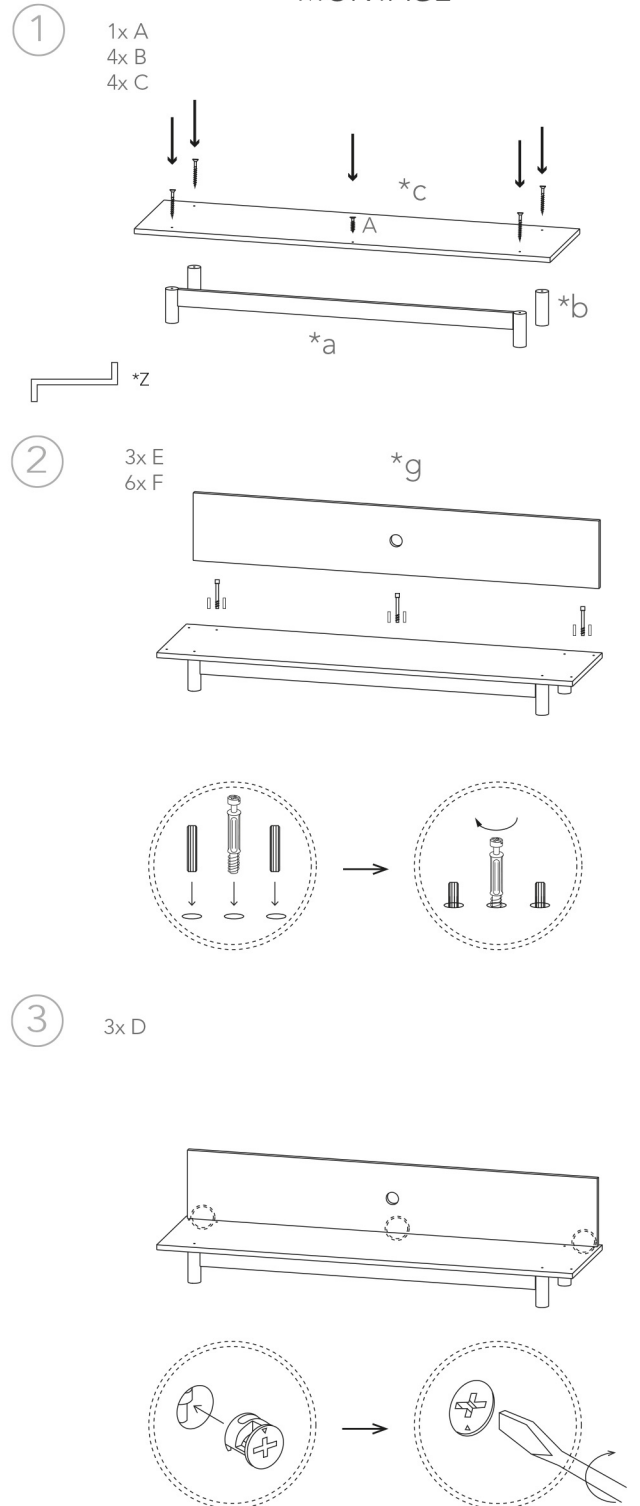 



DECOWOOD®

MUEBLE TV FRIDA MEUBLE TV FRIDA

 
 
4 4x E
8x F

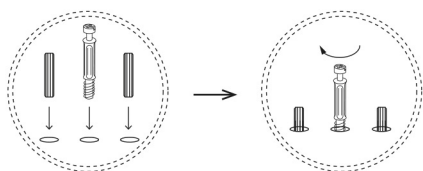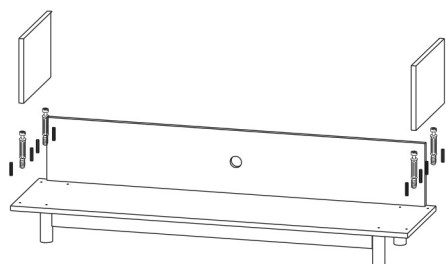



5 4x D

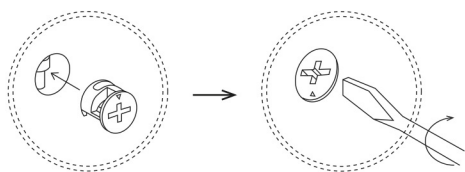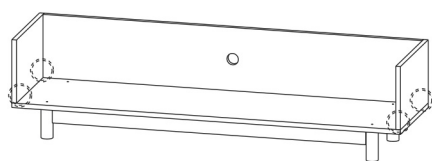  



6 4x E
8x F

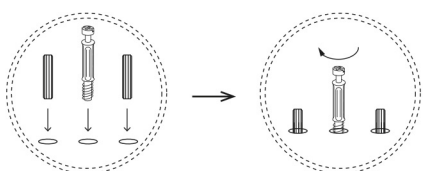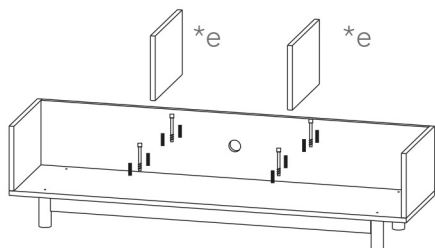  



7 4x D

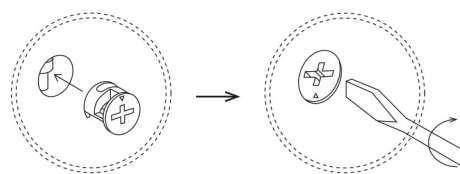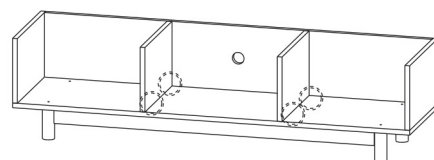  

8 11x E
22x F

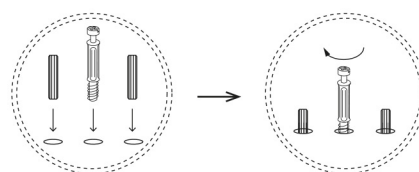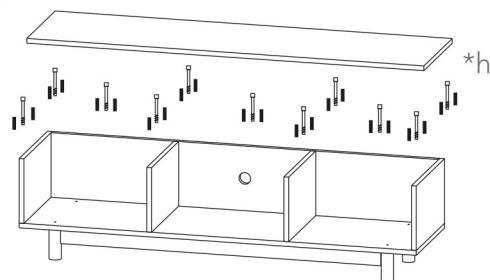  



9 11x D

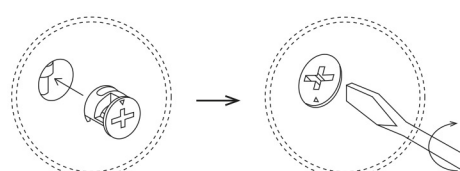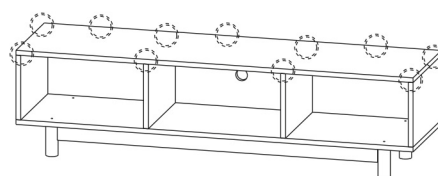  


DECOWOOD®

MUEBLE TV FRIDA MEUBLE TV FRIDA

  10 4x H
8x G

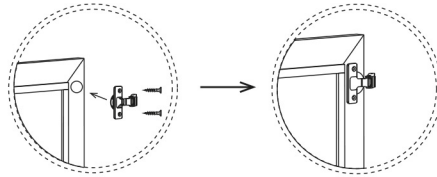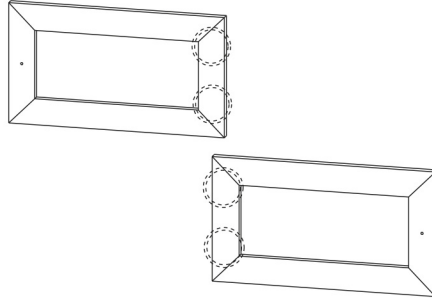

11 8x G

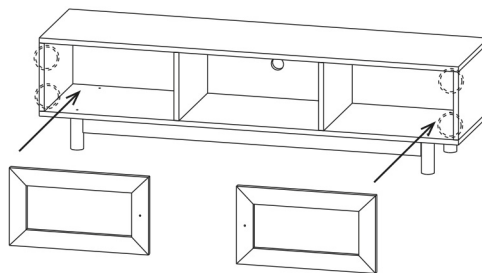 

12

