 
 
 
 
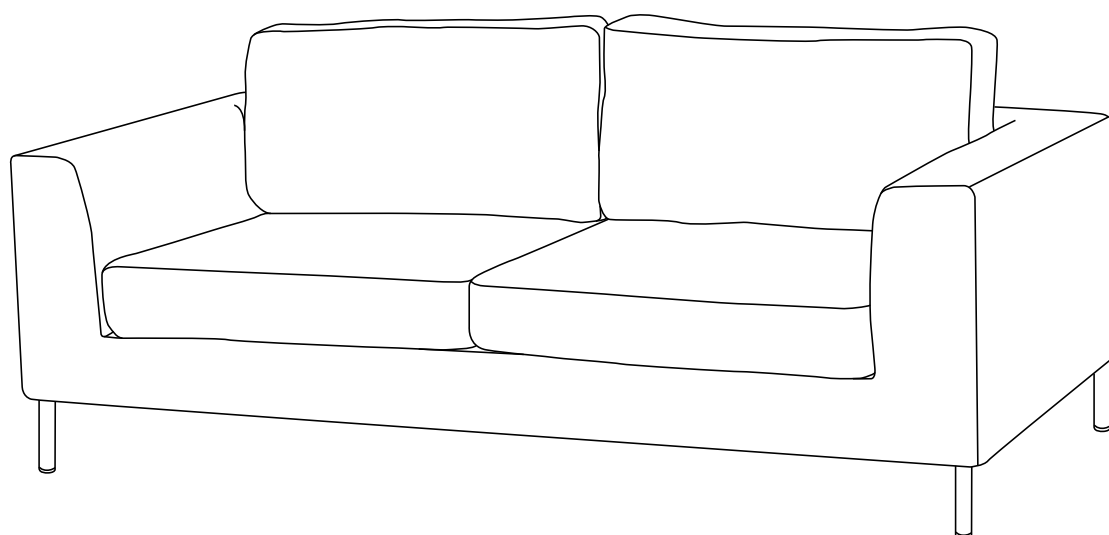 
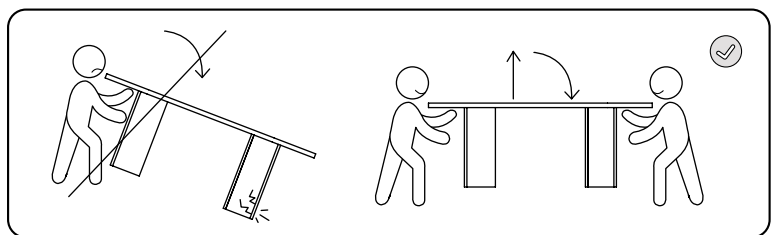 
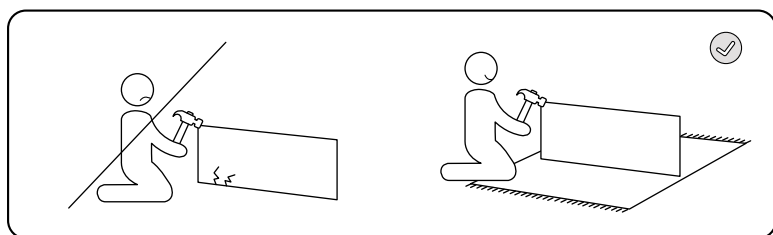 


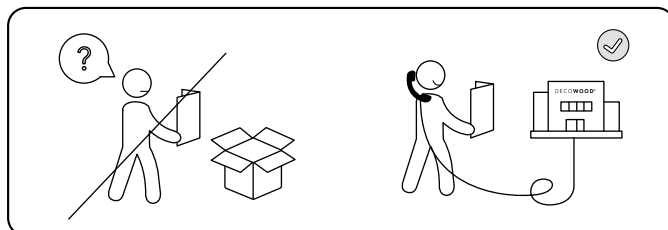

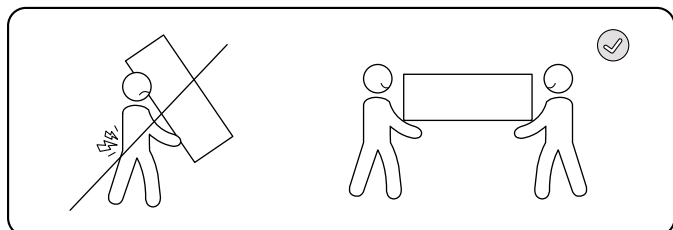


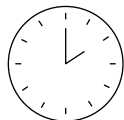


10 min

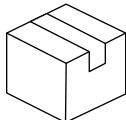

 
x1




x2

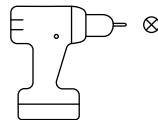 


x1

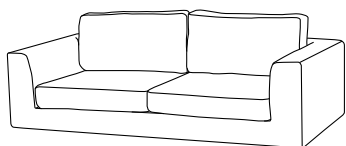 


A x1

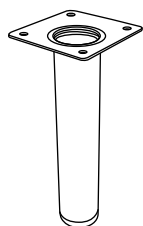 


B x4

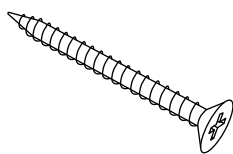 


C x16
Ø4,5x25 mm

 

D x1

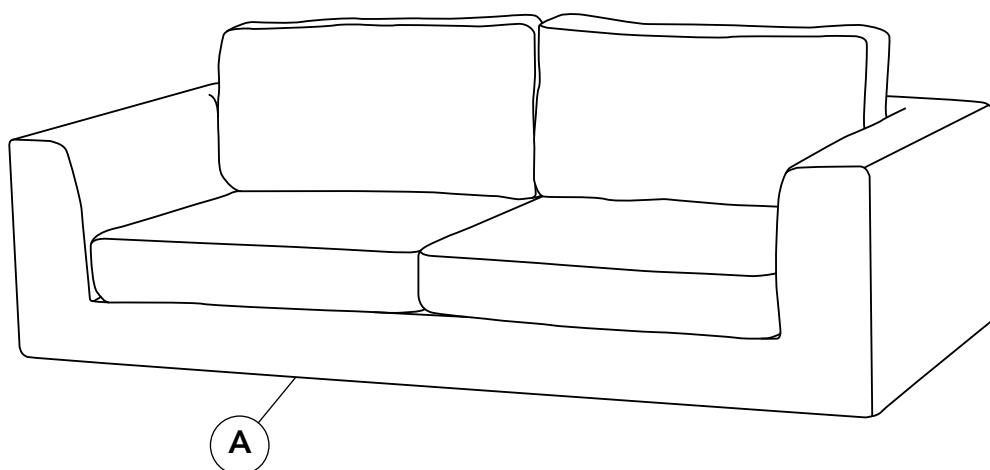 


 - 1 Desatornillar las patas preinstaladas (x4)
Unscrew the pre-installed legs (x4)

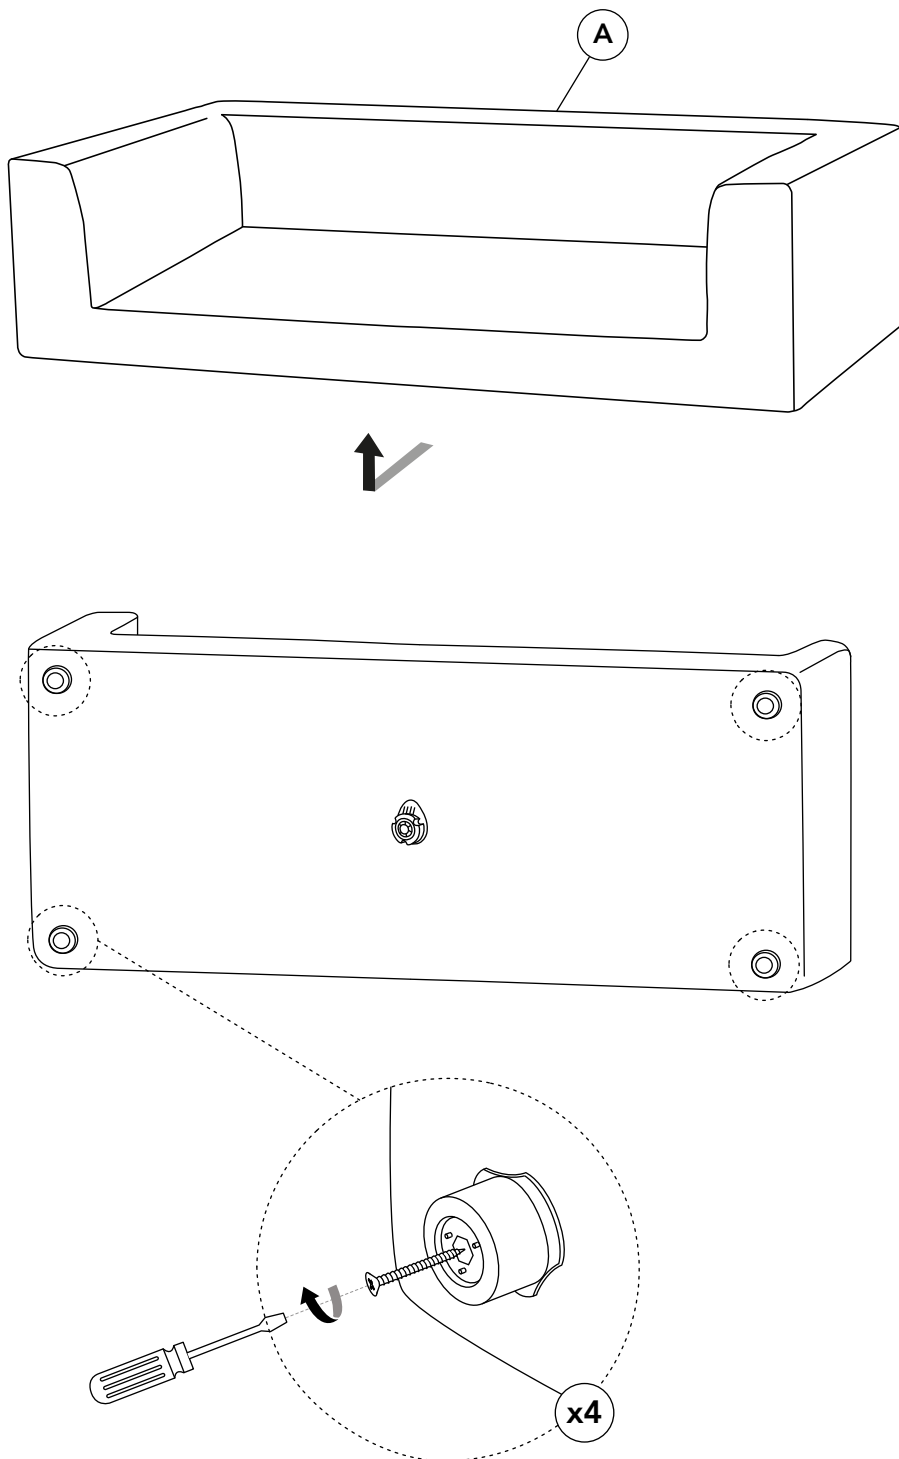



2

 Atornillar las nuevas patas (B x4)
Screw in the new legs (B x4)

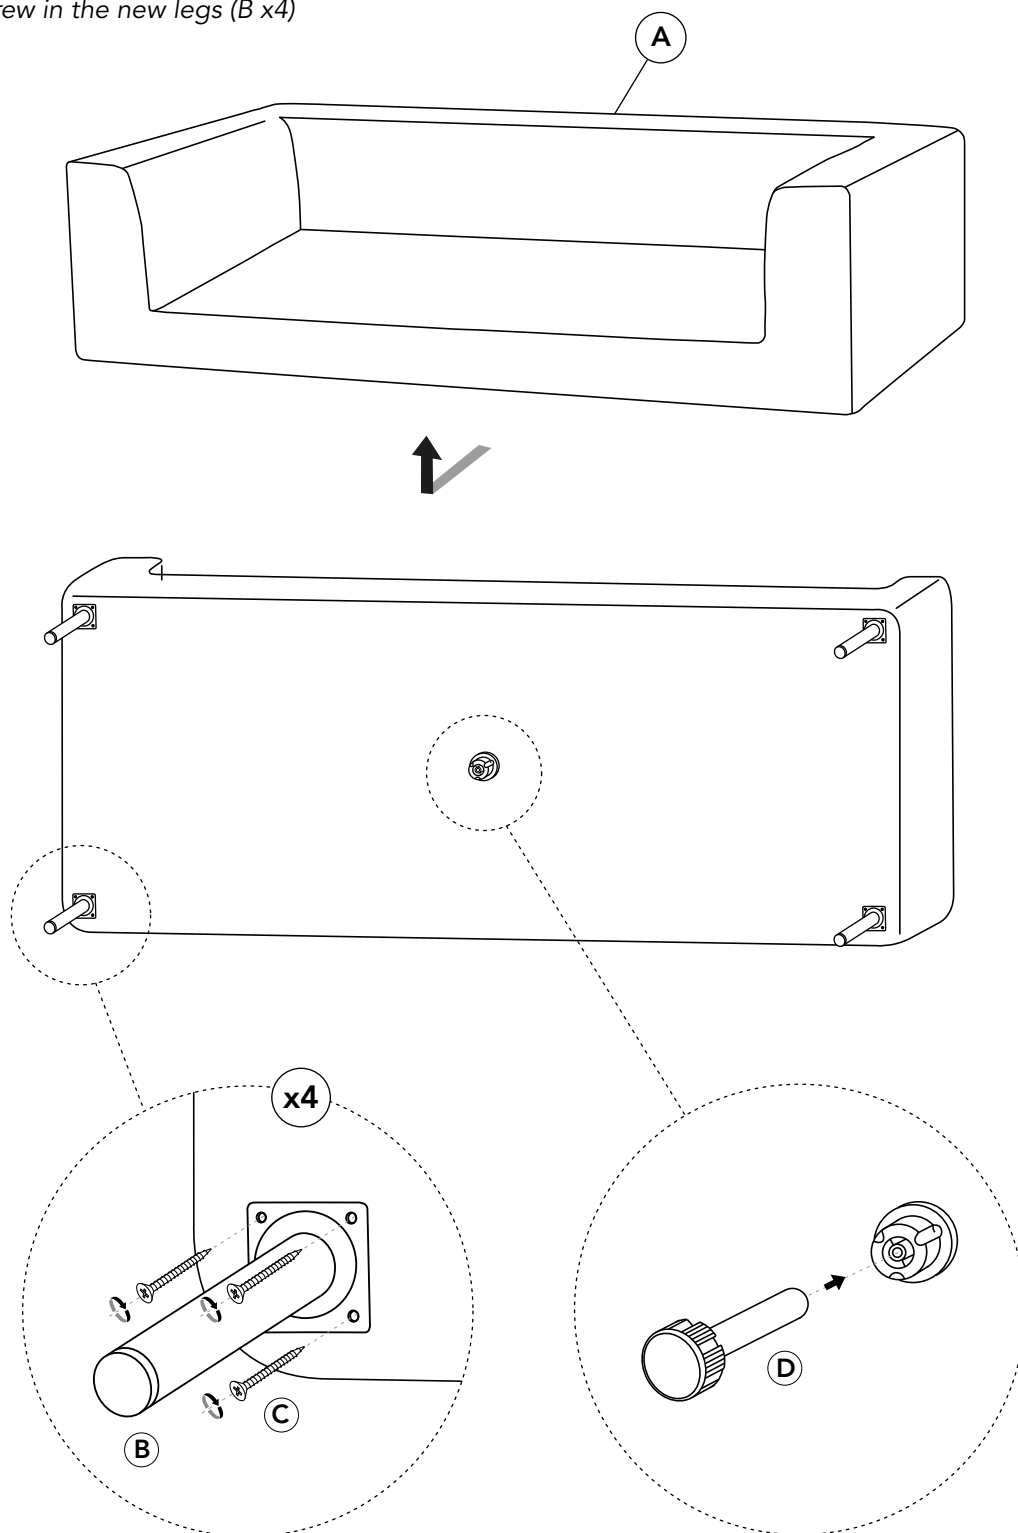

3

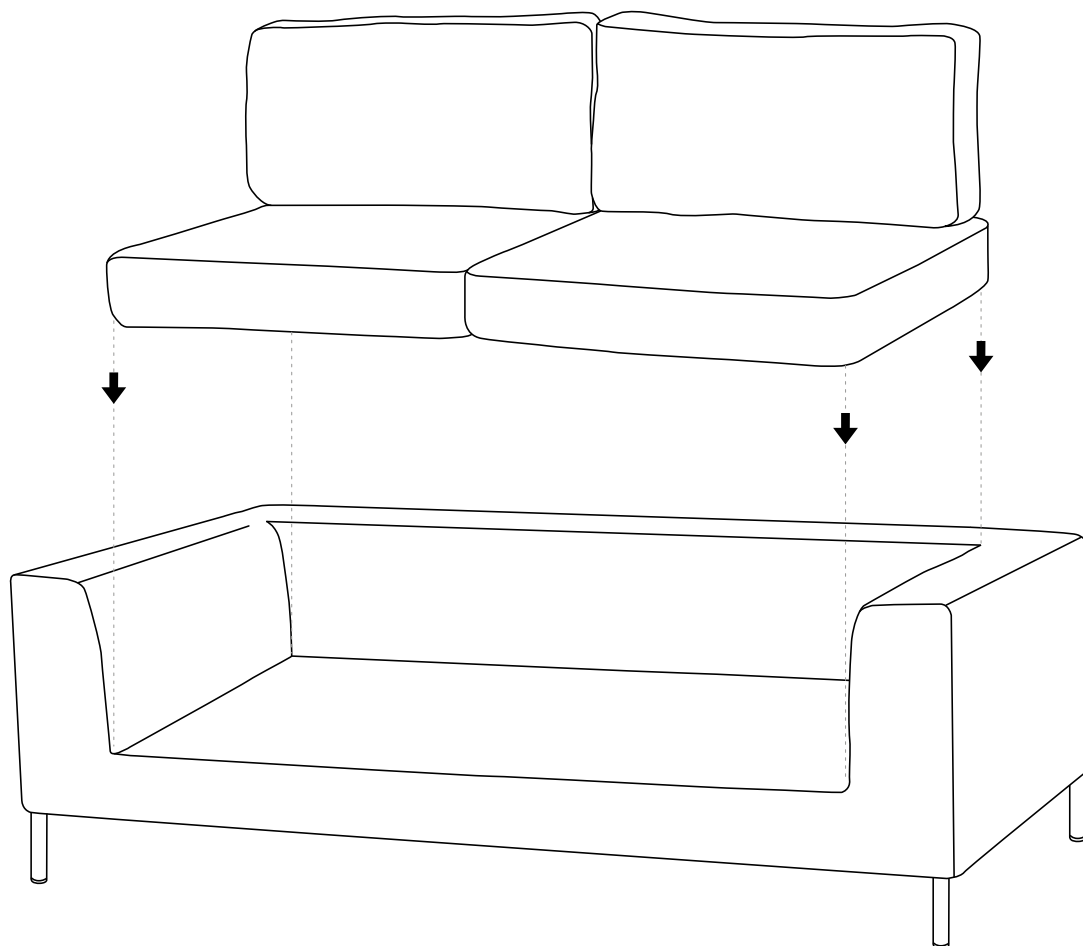 

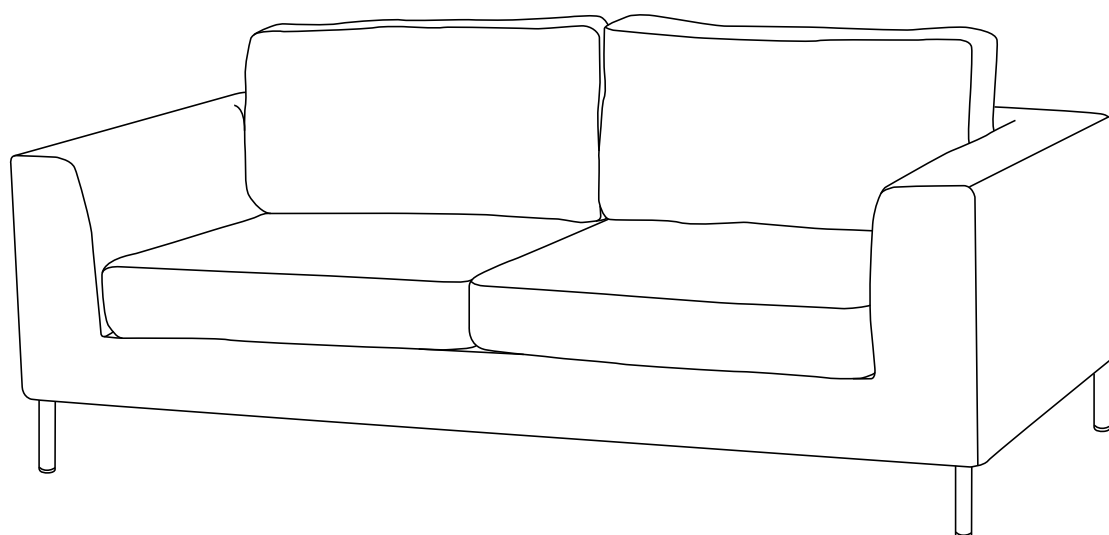 

DECOWOOD®

**The change
starts here.**



www.decowood.com