 
 
 
 
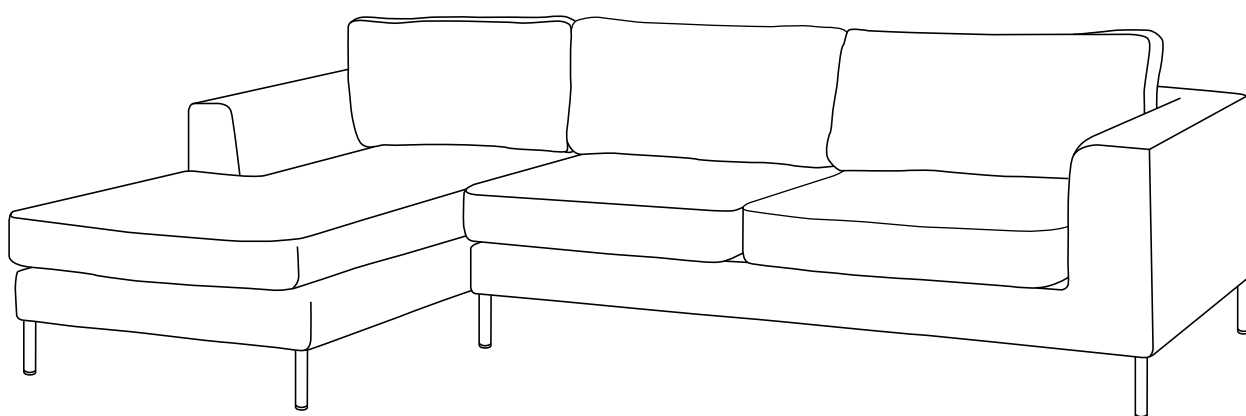 
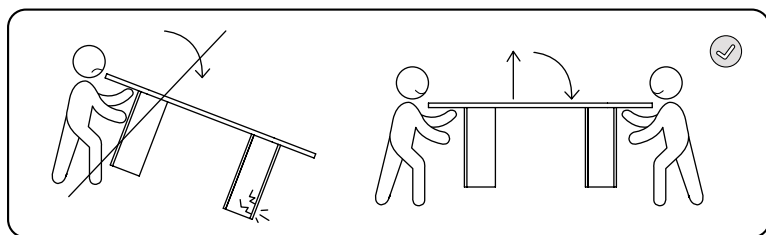 
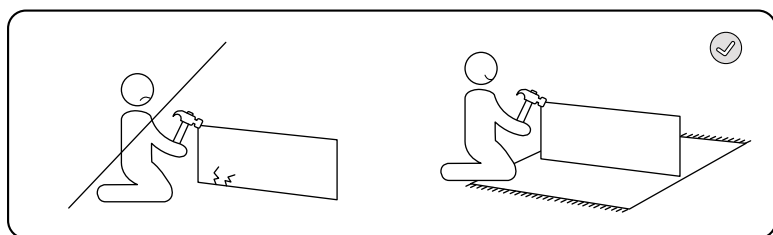 


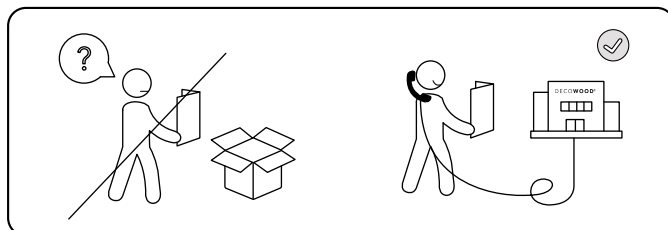

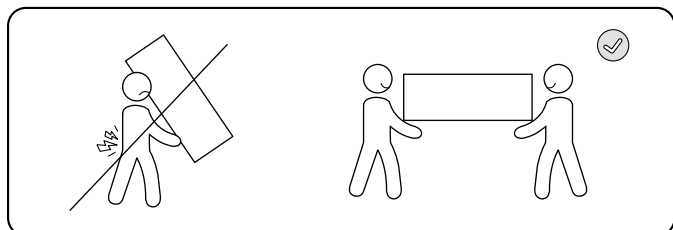


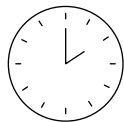


10 min

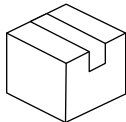

 
x2




x2

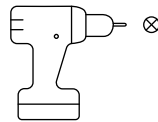 


x1

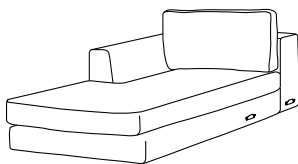 


A x1

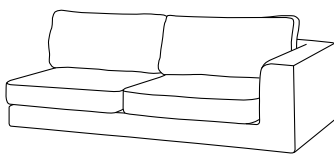 


B x1

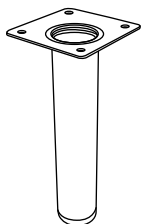 


C x8

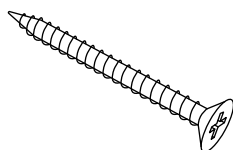 






D x32
Ø4,5x25 mm

 

E x2

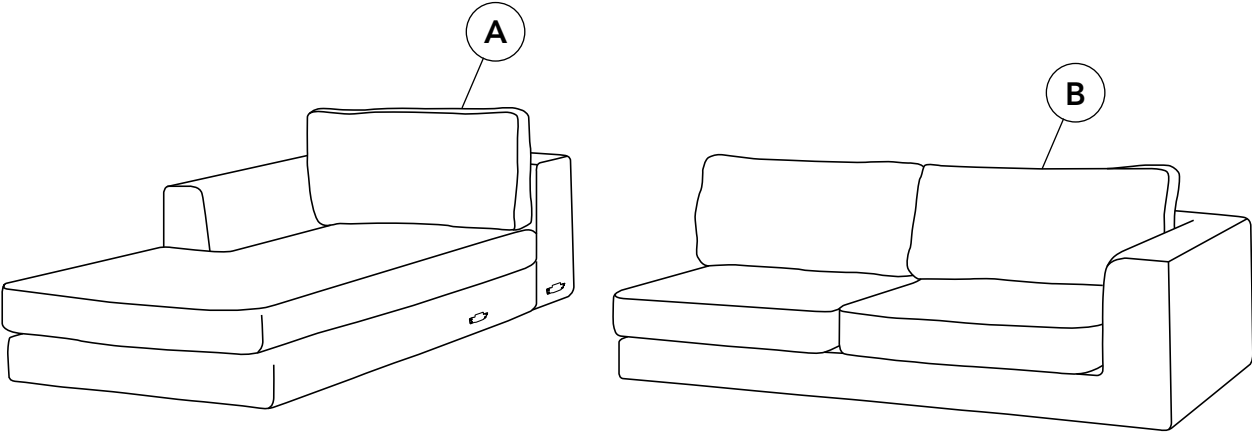 


     - 1 Desatornillar las patas preinstaladas (x8)
Unscrew the pre-installed legs (x8)

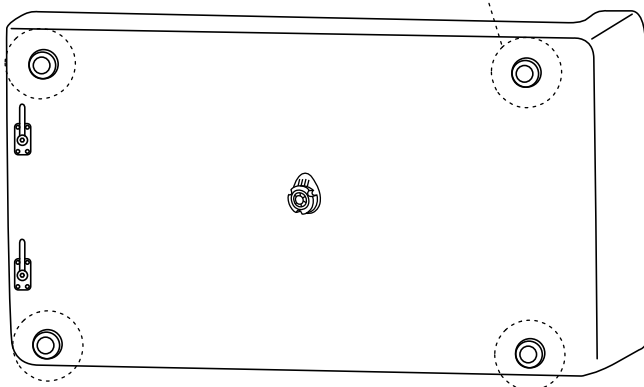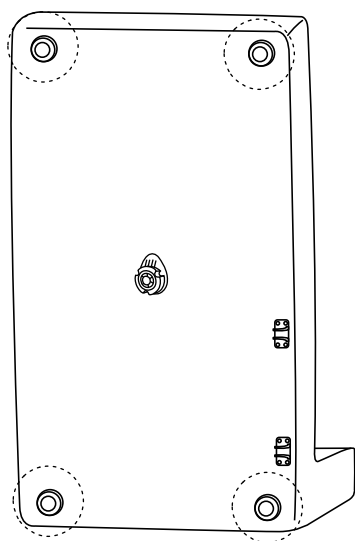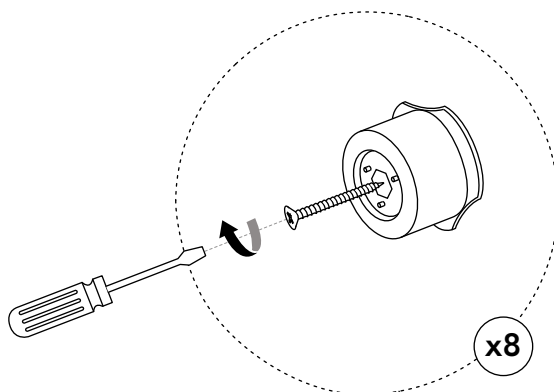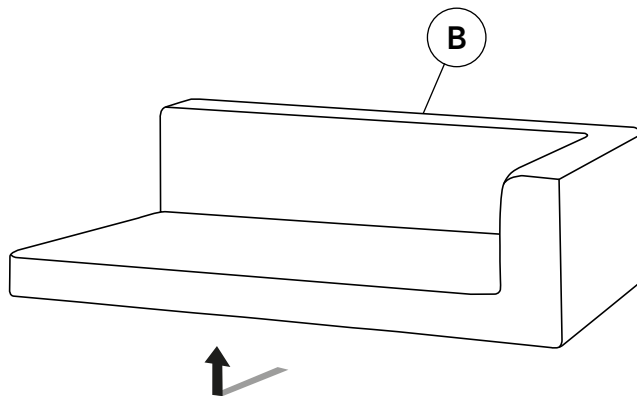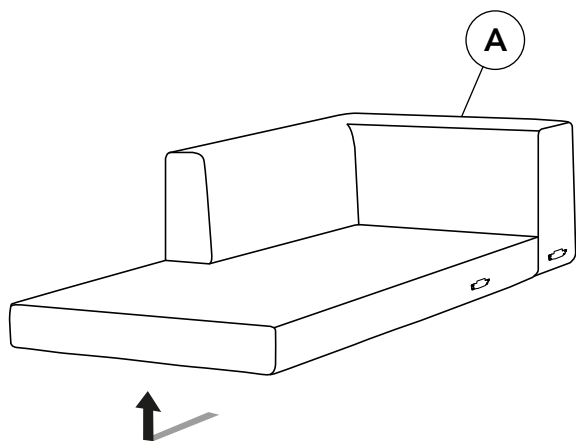


2

 
Atornillar las nuevas patas (C x8)
Screw in the new legs (C x8)

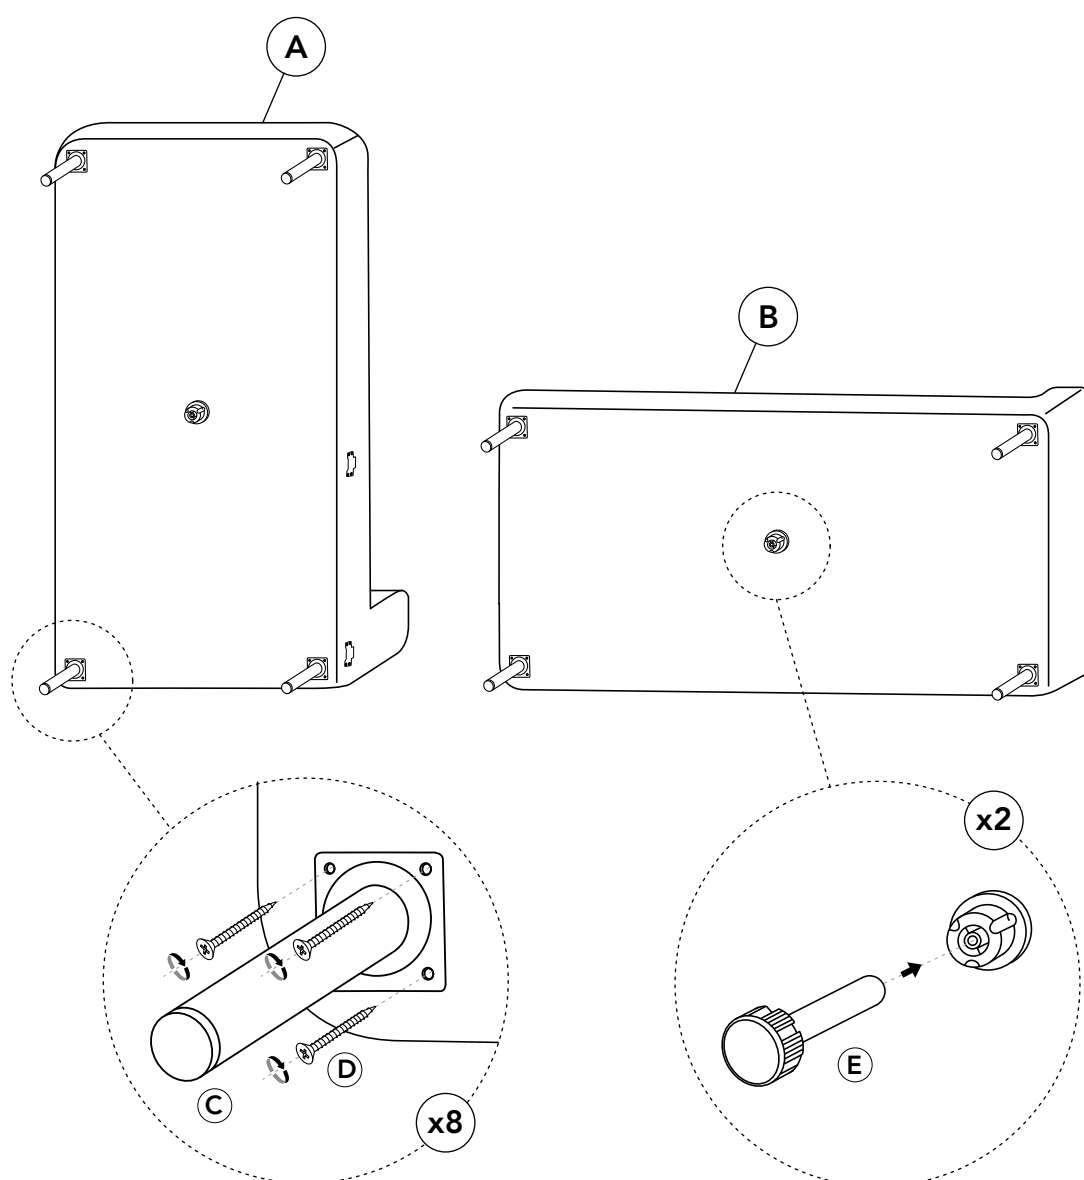


3

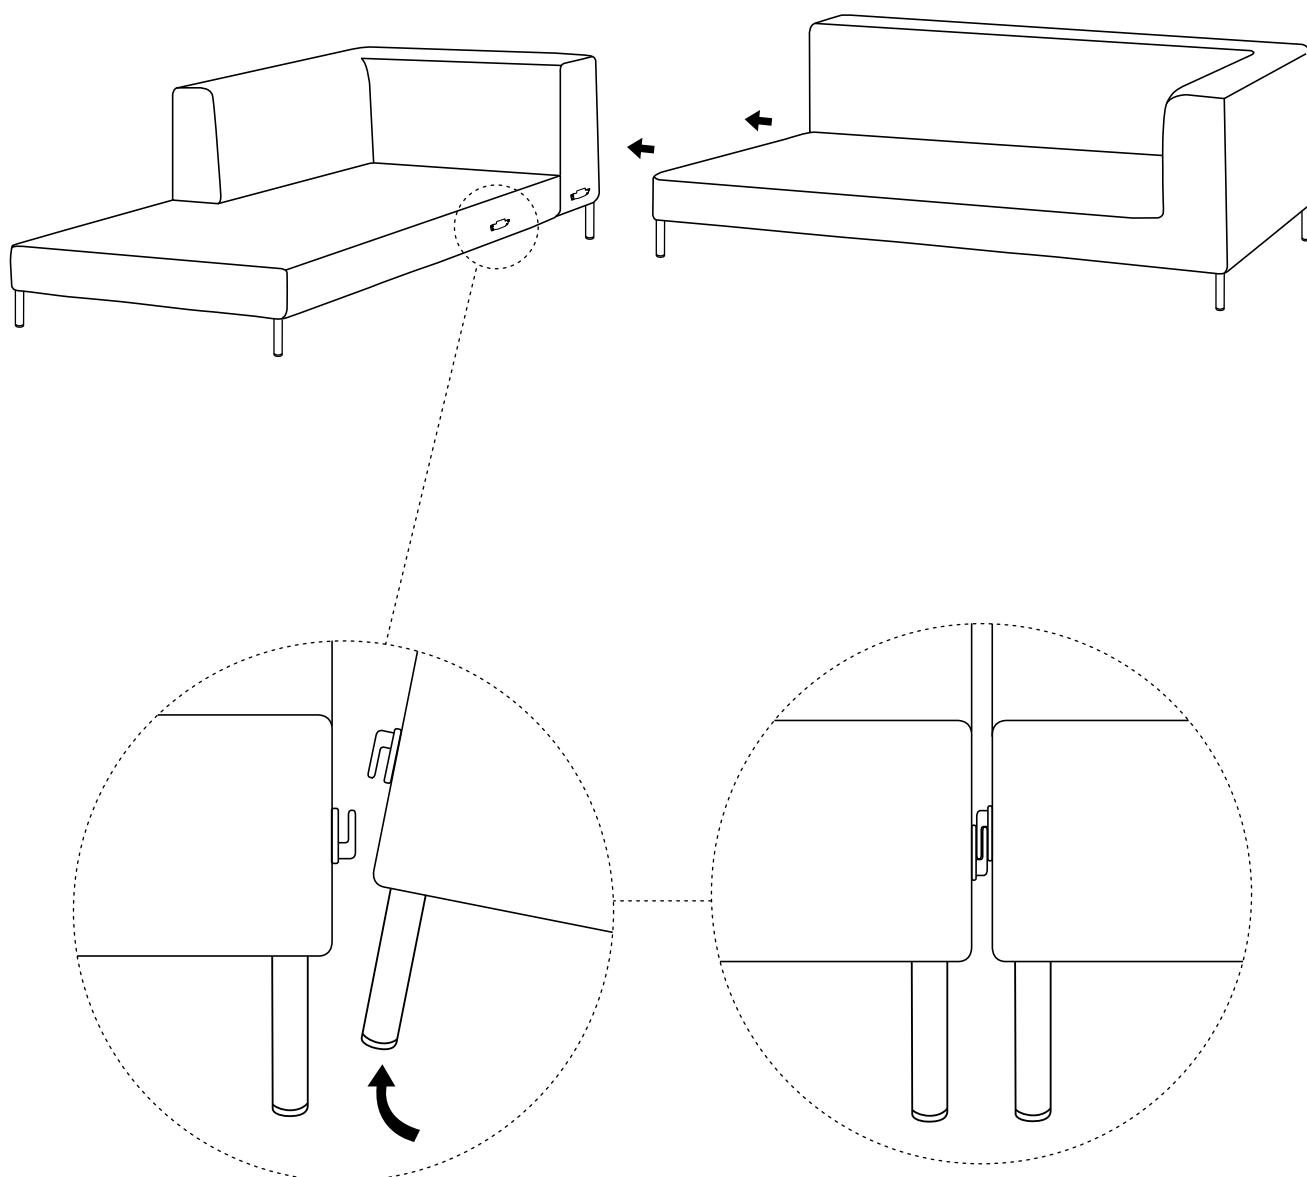 

4

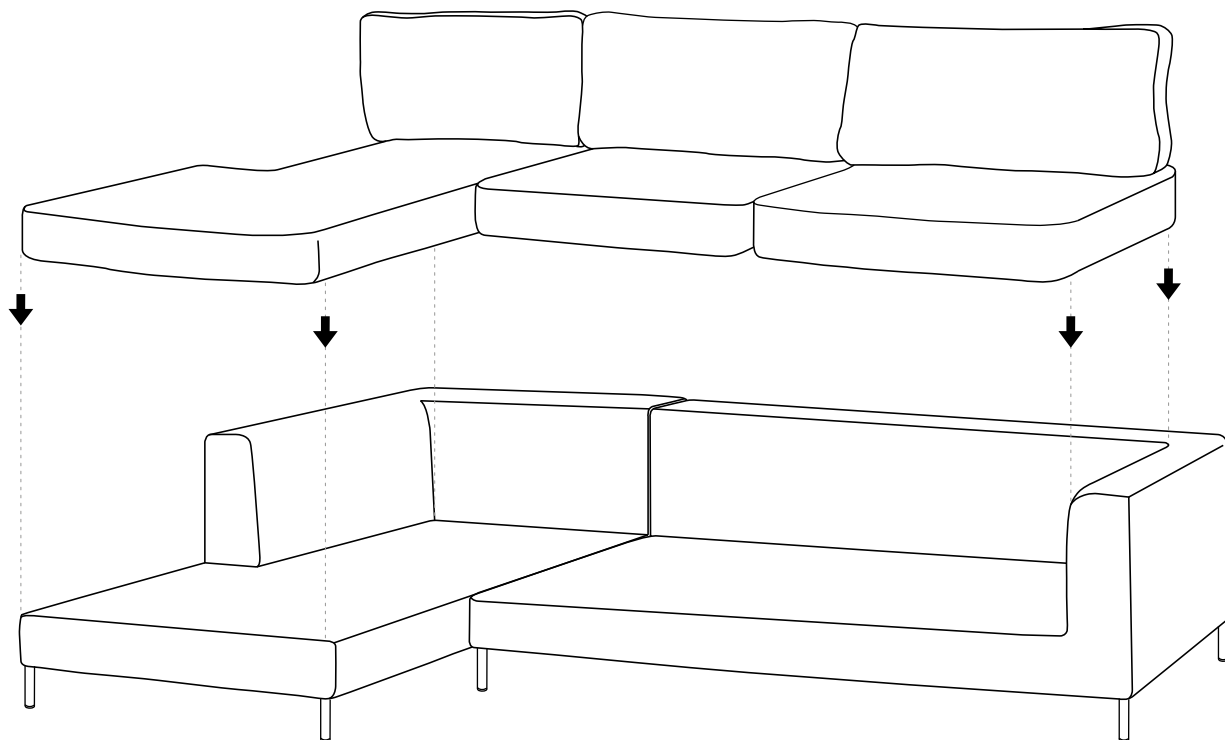 

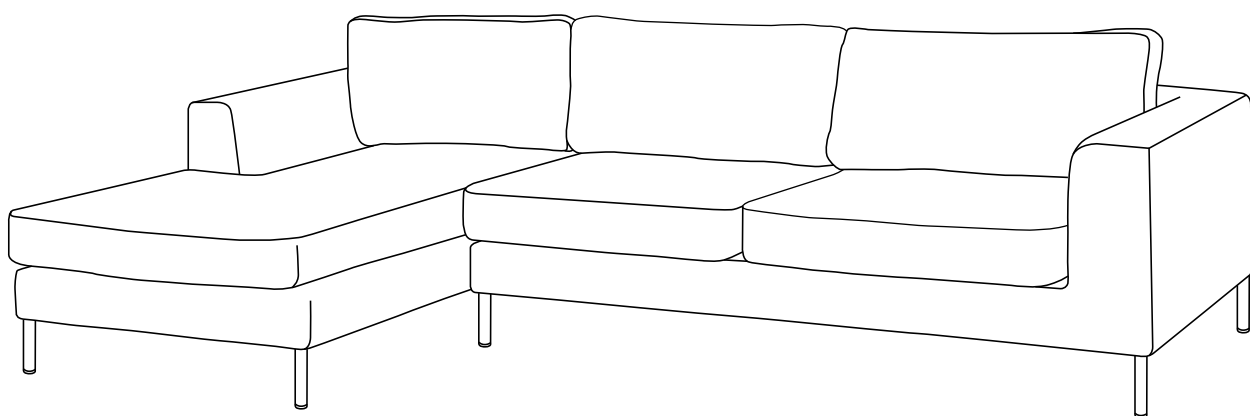 

DECOWOOD®

**The change
starts here.**



www.decowood.com