






5 min

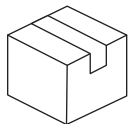

x1




x1




x1




A x1





B x4




C x1

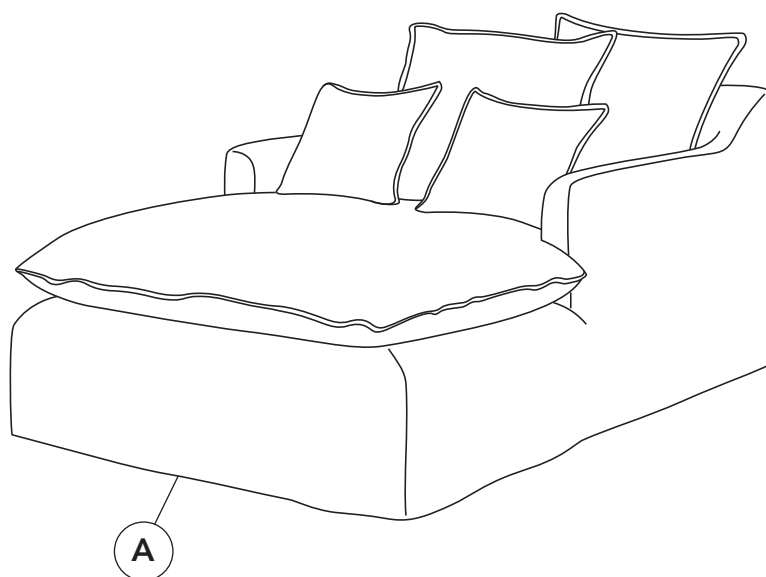


- 1 Desatornillar las patas preinstaladas (x4)
Unscrew the pre-installed legs (x4)

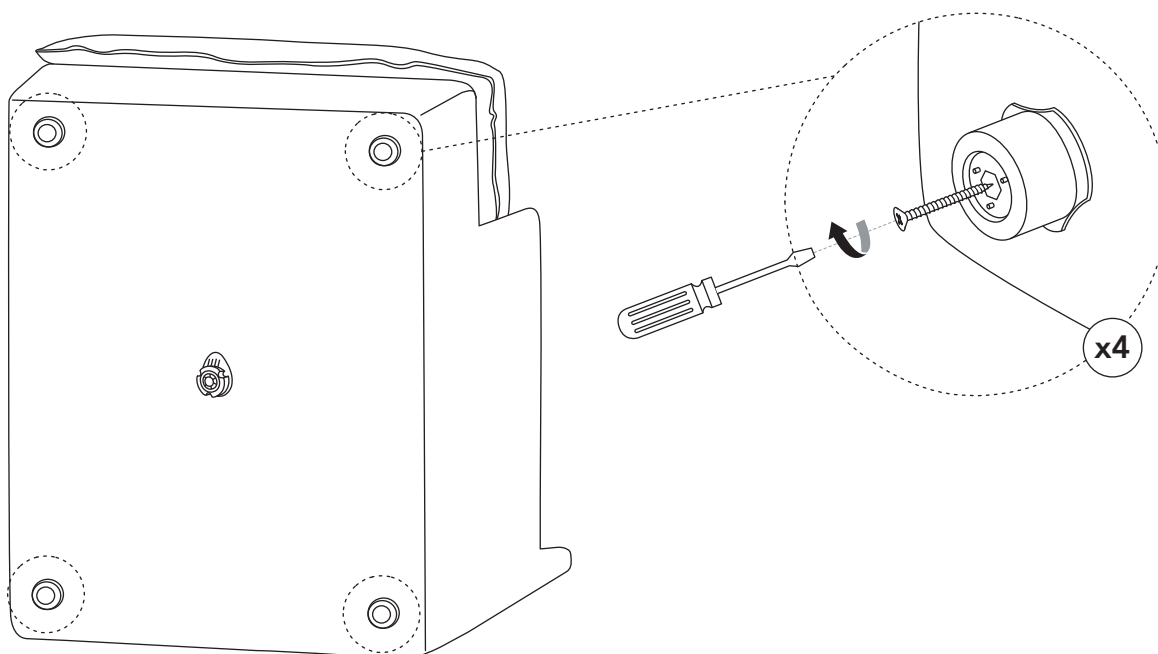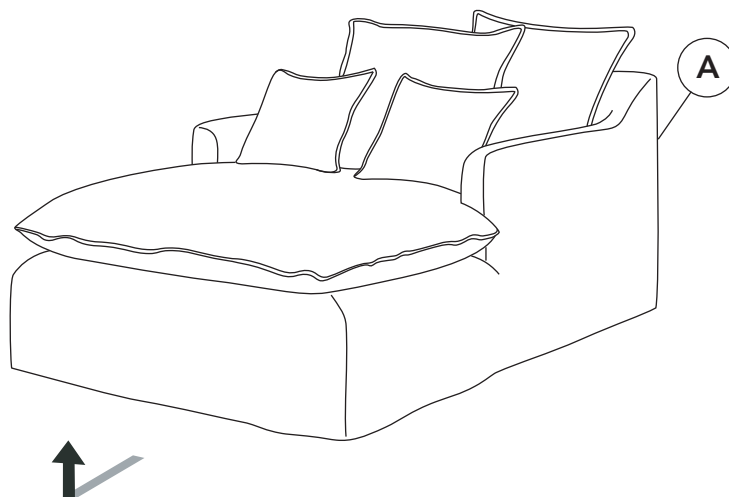


- 2 Atornillar las nuevas patas (B x4)
Screw in the new legs (B x4)

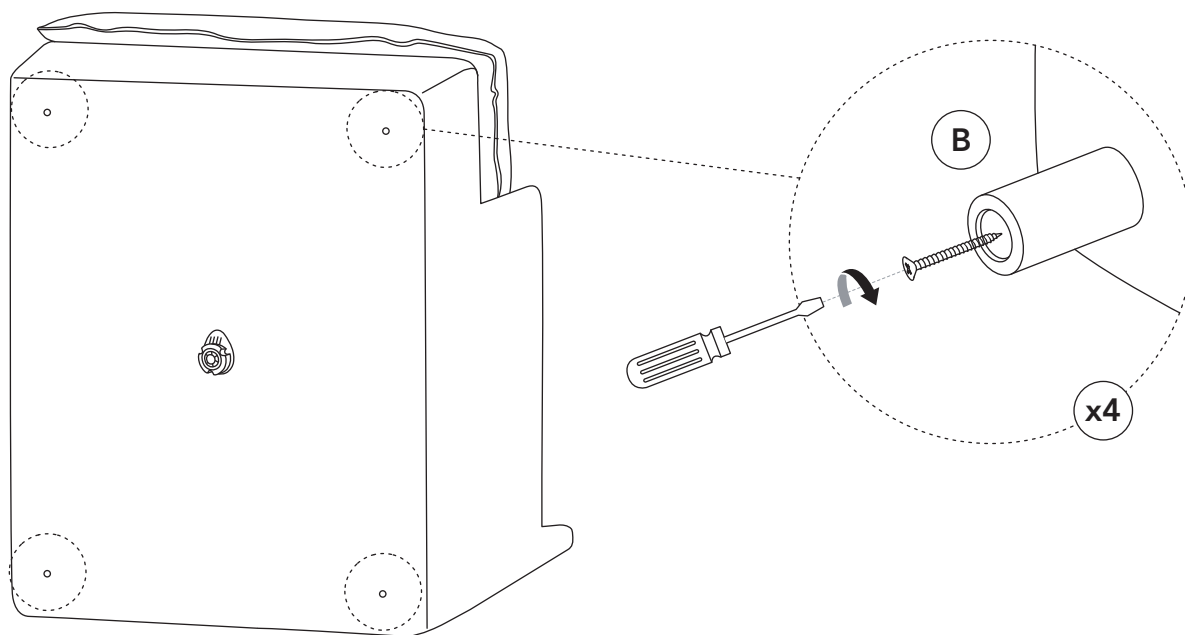

- 3

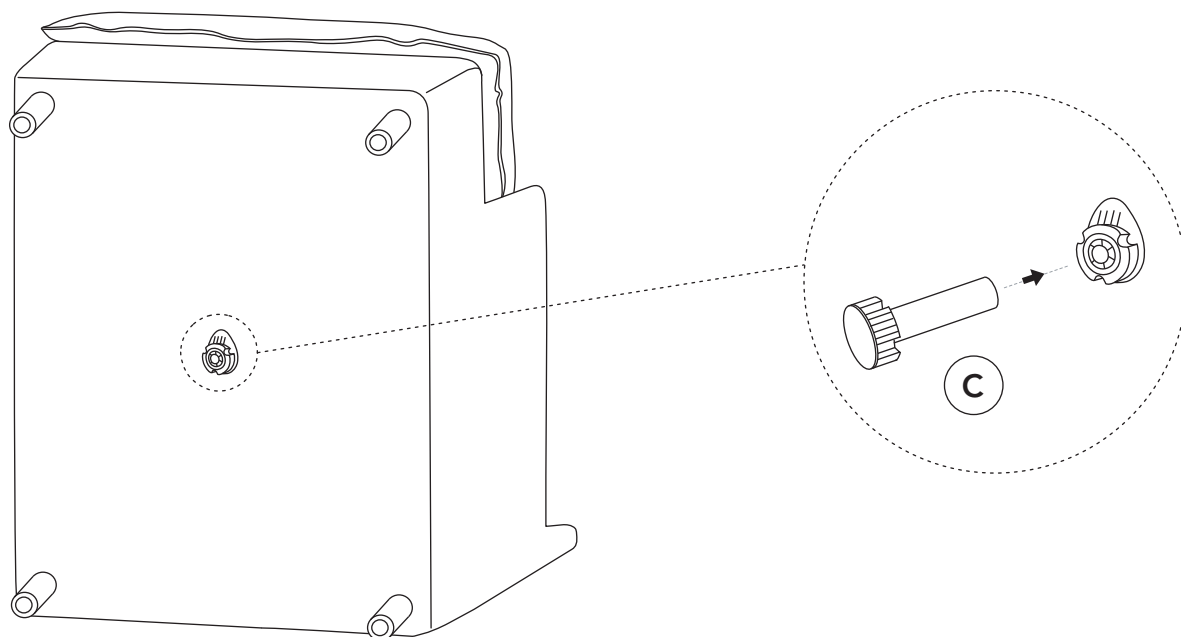

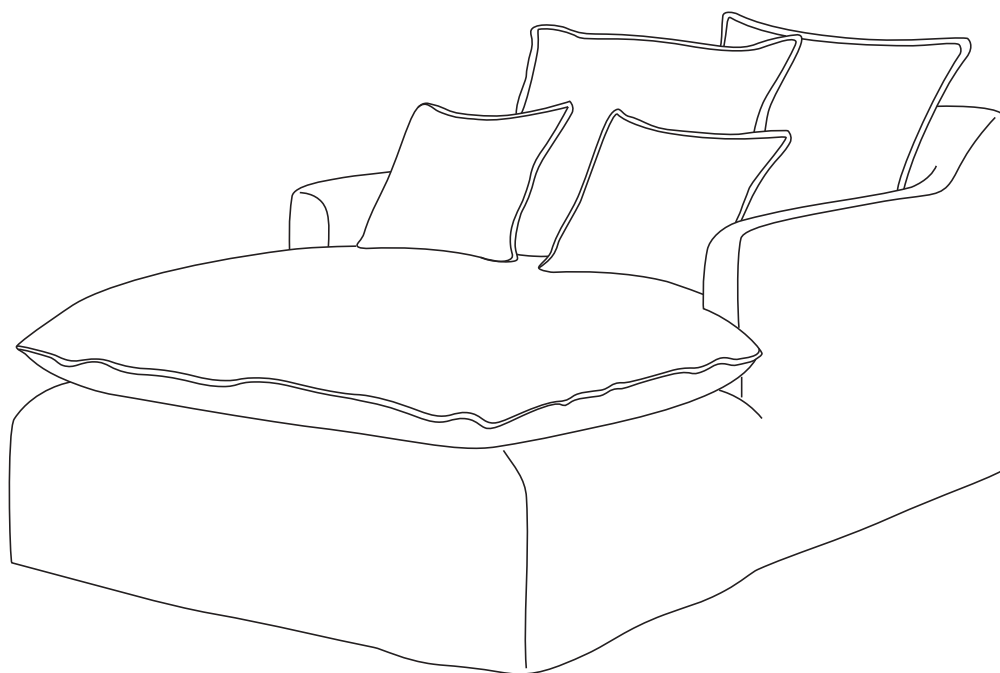

DECOWOOD®

**The change
starts here.**

