






5 min

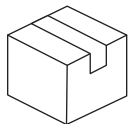


x1




x1




x1

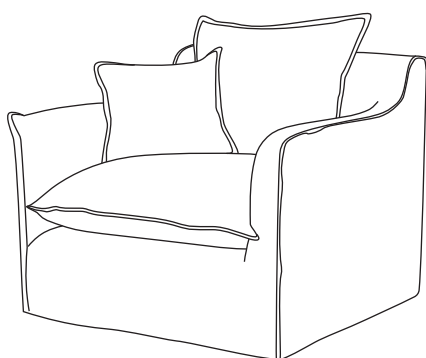



**A** x1




**B** x4

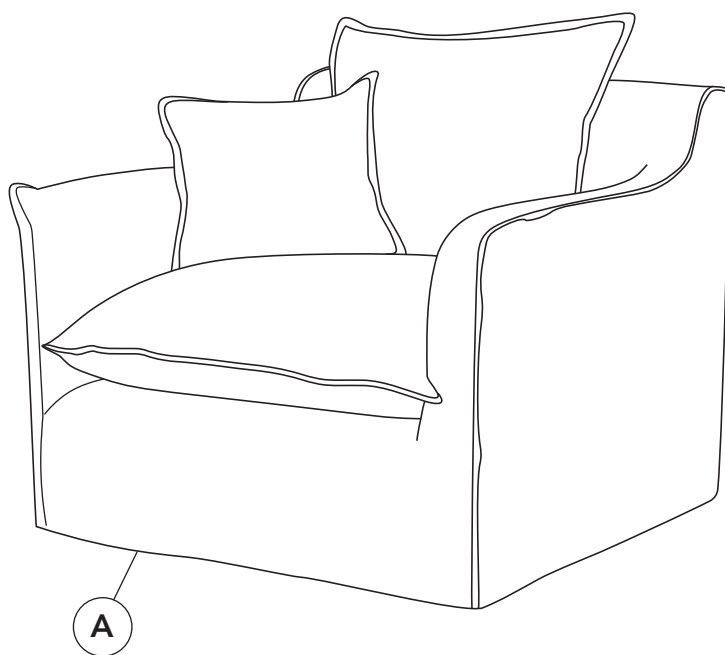


- 1 Desatornillar las patas preinstaladas (x4)  
*Unscrew the pre-installed legs (x4)*

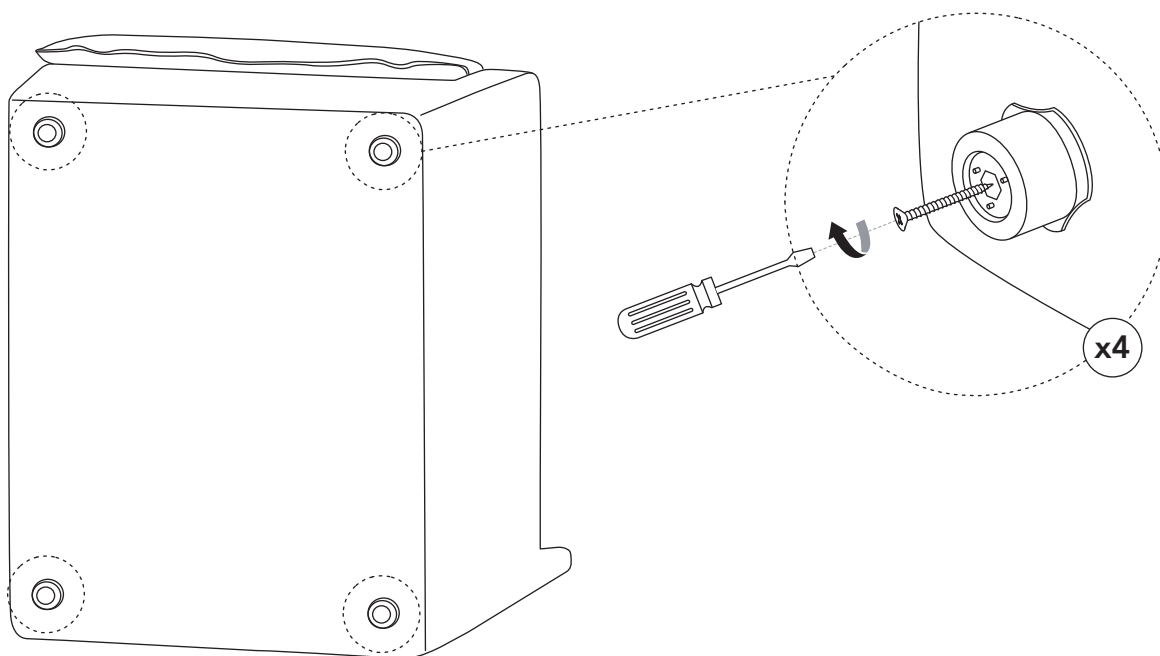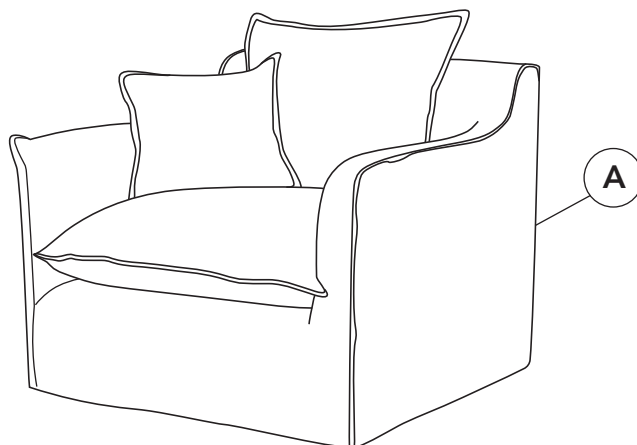

- 2 Atornillar las nuevas patas (B x4)  
Screw in the new legs (B x4)

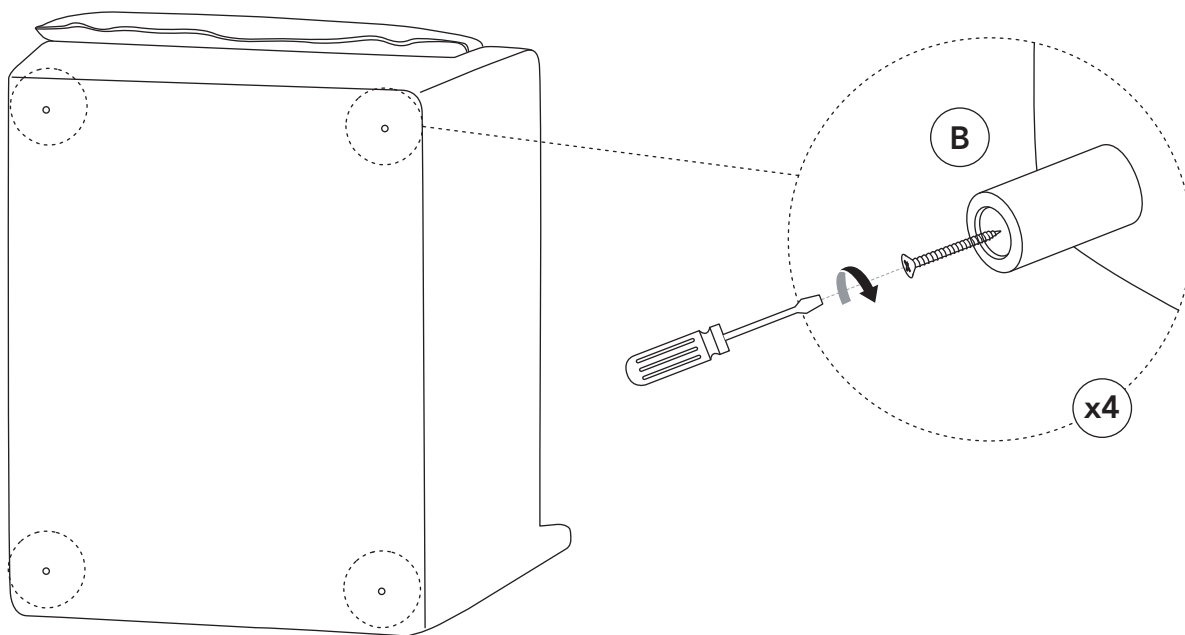

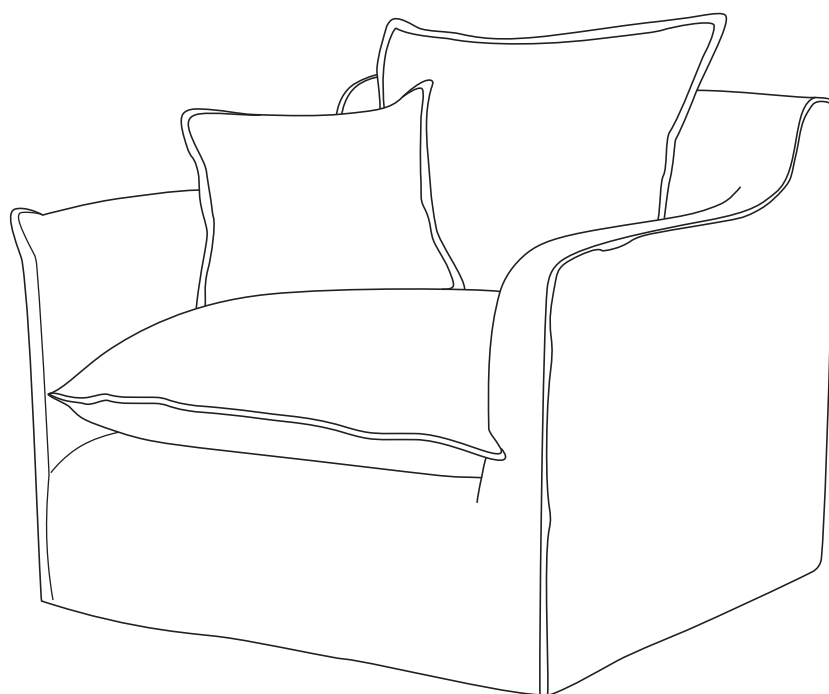

DECOWOOD®

**The change  
starts here.**

