



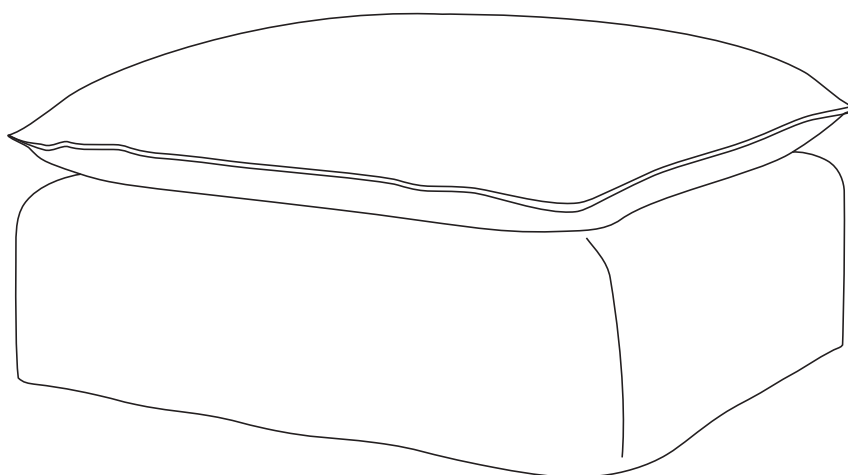
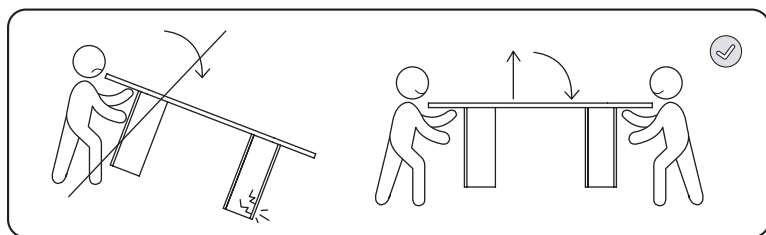


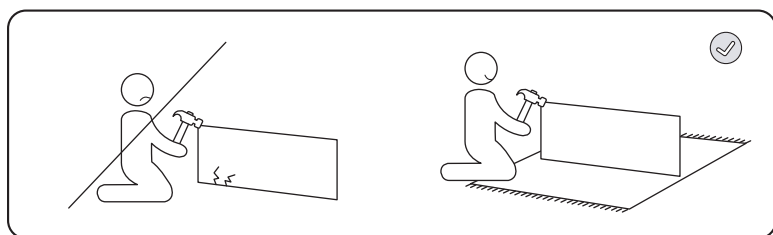

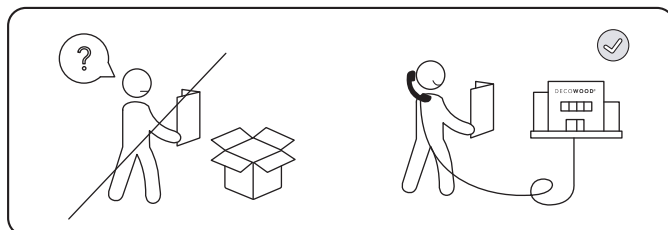


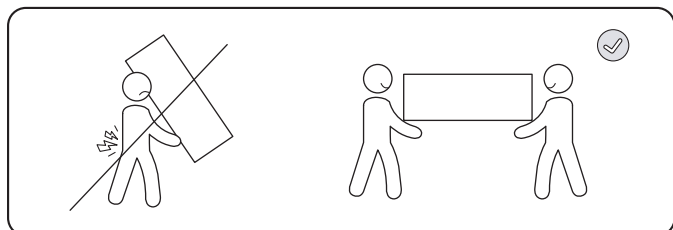

5 min

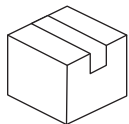


x1




x1




x1

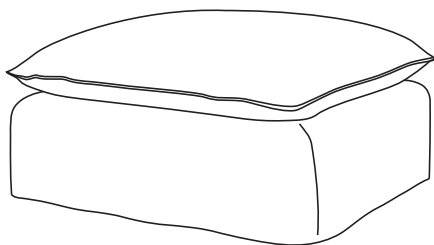


A x1



B x4

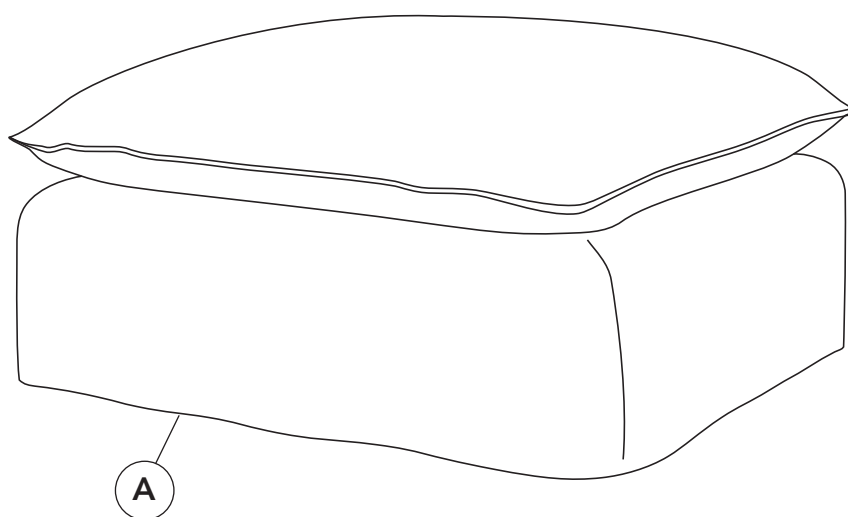



- 1 Desatornillar las patas preinstaladas (x4)
Unscrew the pre-installed legs (x4)

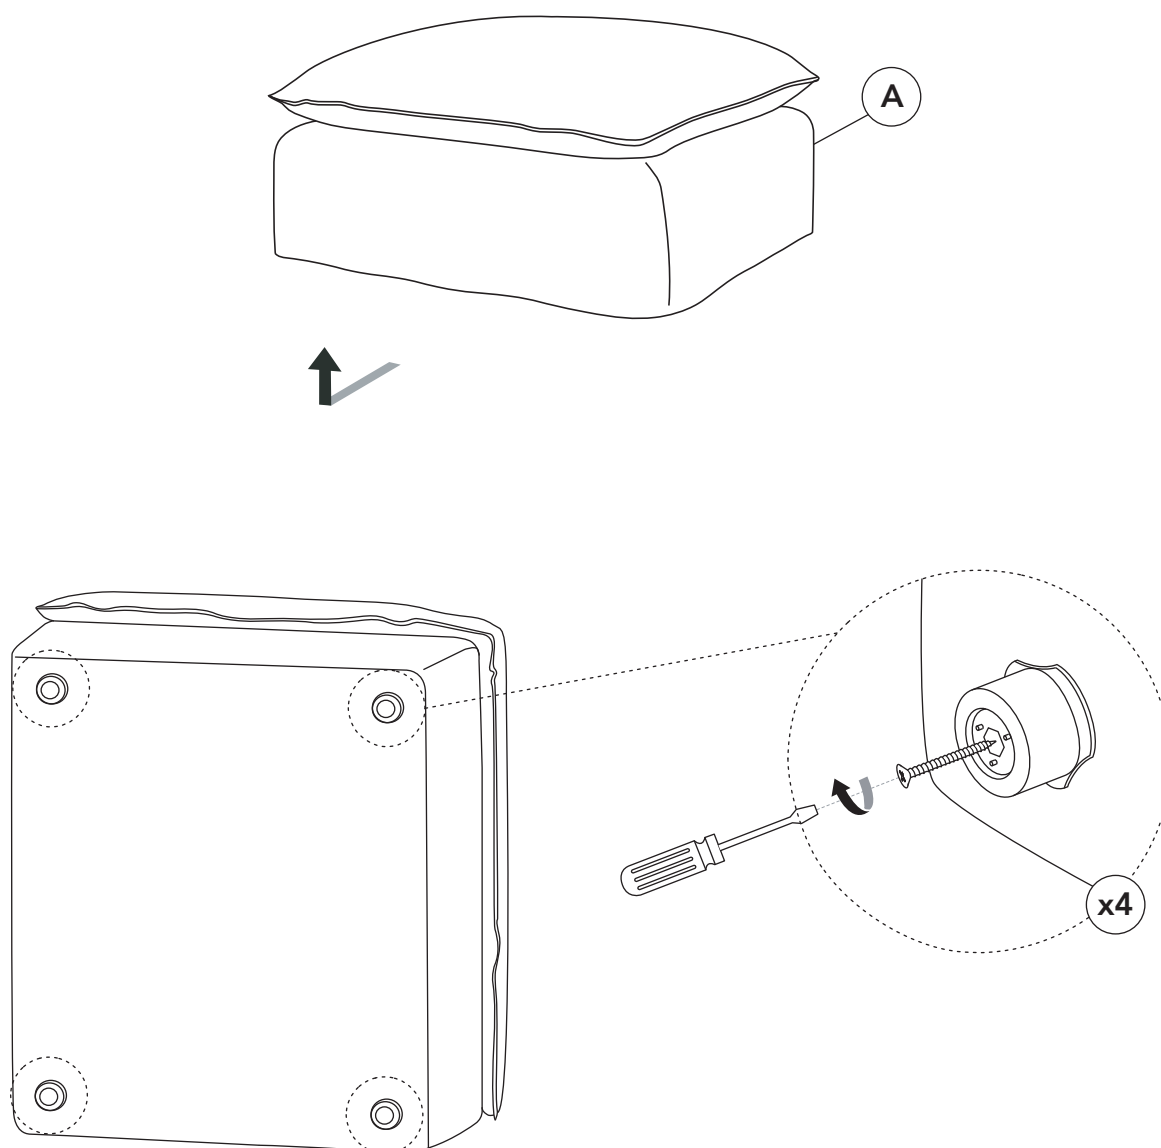

2

Atornillar las nuevas patas (B x4)
Screw in the new legs (B x4)

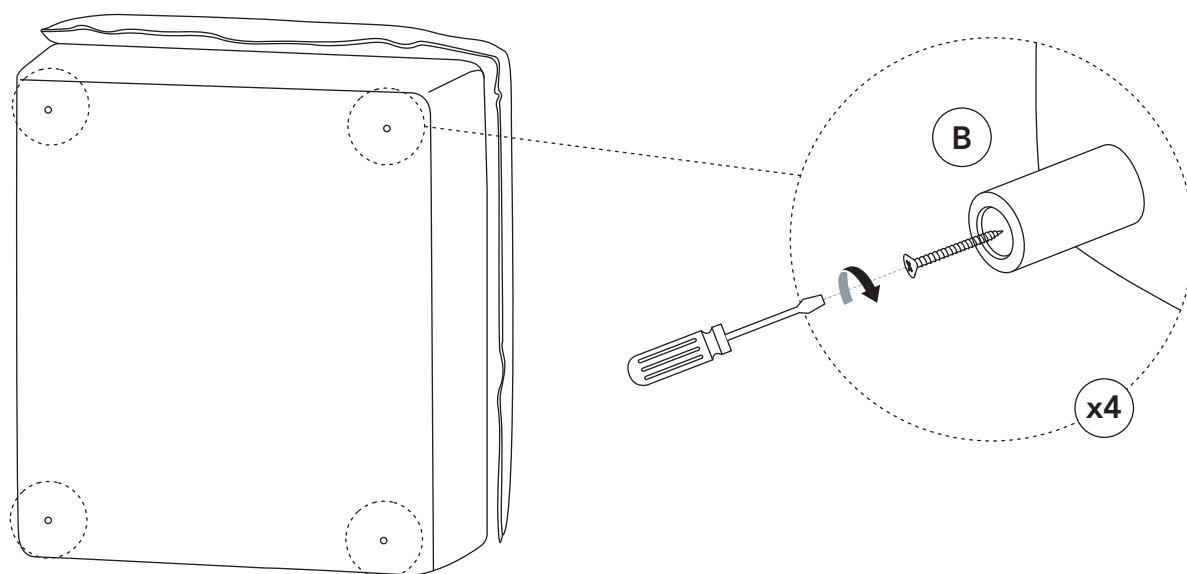

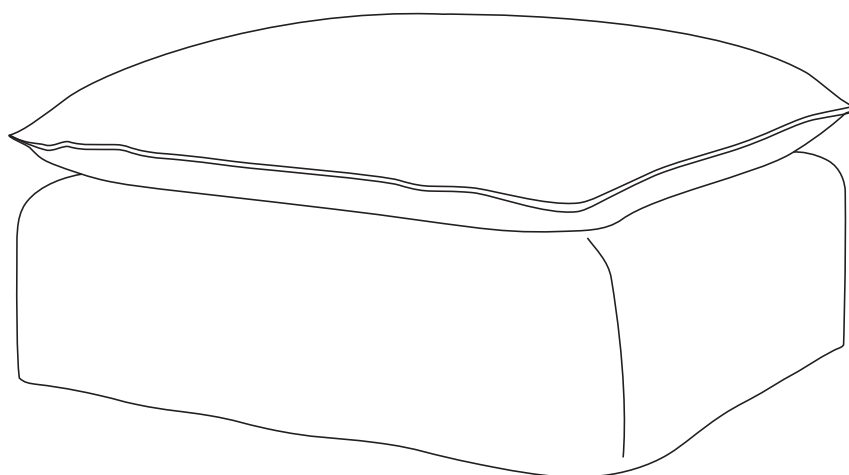

DECOWOOD®

**The change
starts here.**

