


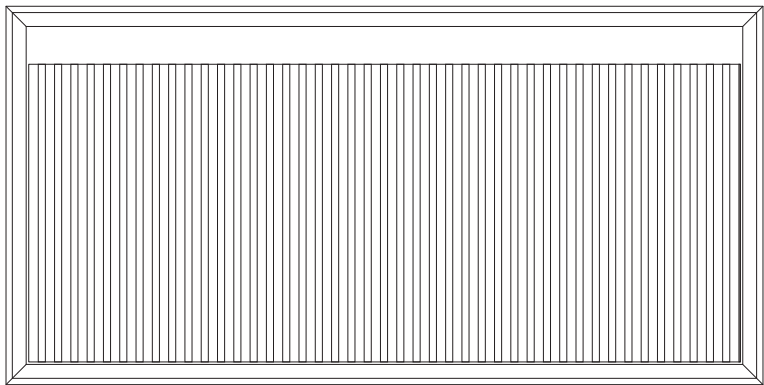
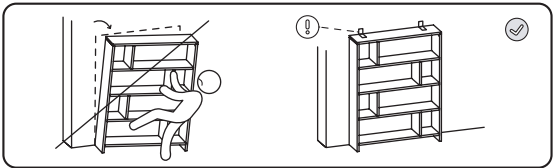
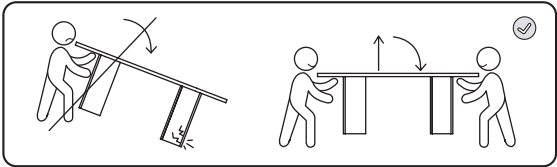
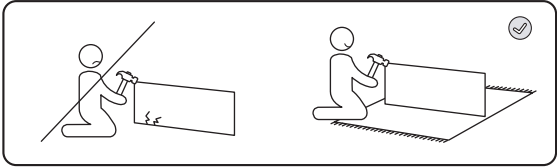


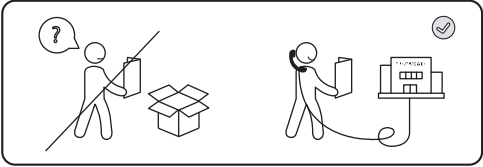

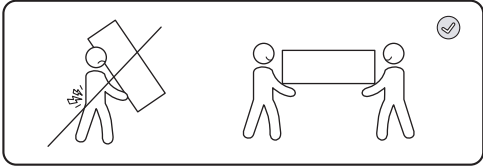


1

Pre-cladding

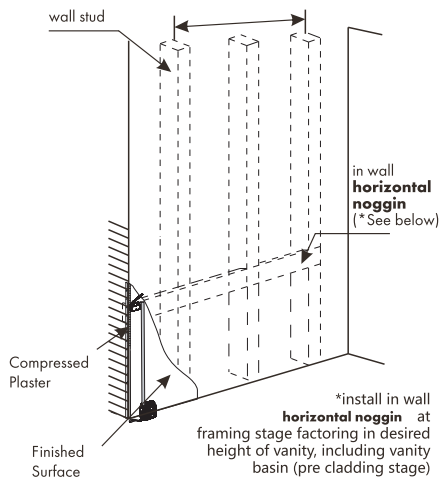


2


Post-cladding

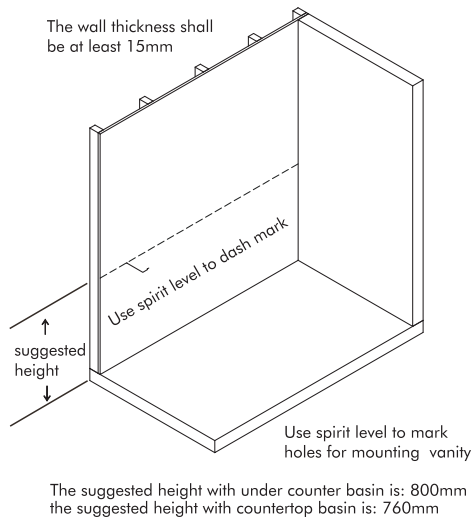

- 3
- Remove all drawers by following the provided Installation Guide.

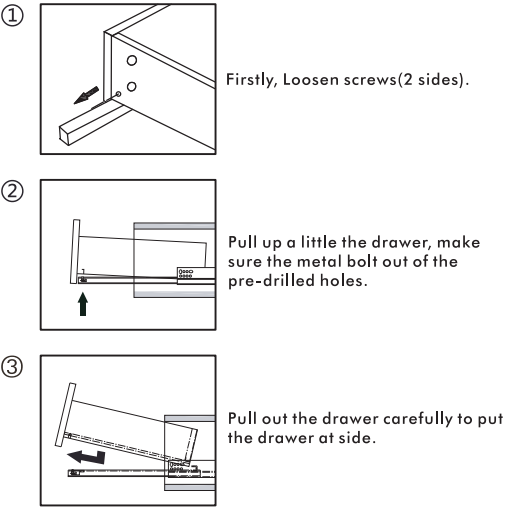


- 4
- The rubber cover mechanisms on both sides of the drawer can be removed by rotating them.

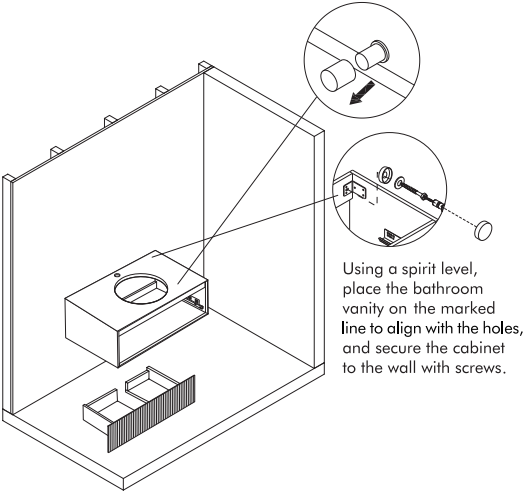


5 Install all drawers by following the provided Installation Guide.


- ①

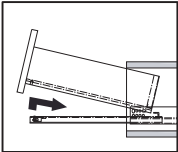

First, check that the pre-drilled holes on the rear of the drawer align with the metal hooks at the end of the drawer slides.
- ②

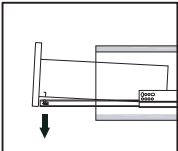


Then push the drawer upward toward the drawer base until the drawer slides click securely into the pre-drilled holes.
- ③

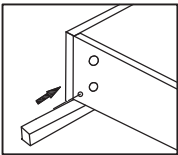


After installing the drawer, use a screwdriver to fasten the drawer securely to the metal slides.

6

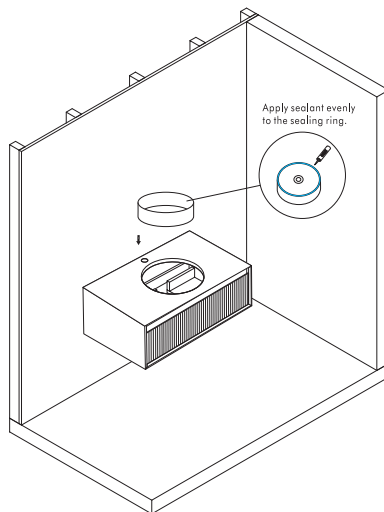

7

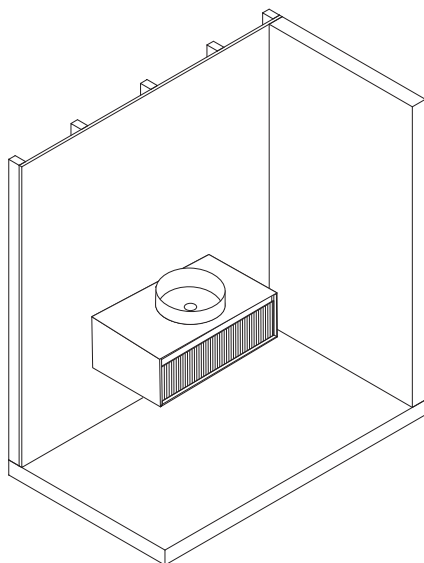

8


The unit must be sealed along the back edge of the top and down the sides against the wall with non-acidic bathroom & kitchen silicone.

9

When the silicone has dried, ensure you caulk around the basin.

10

The vanity is now ready for the tapware and waste installation.

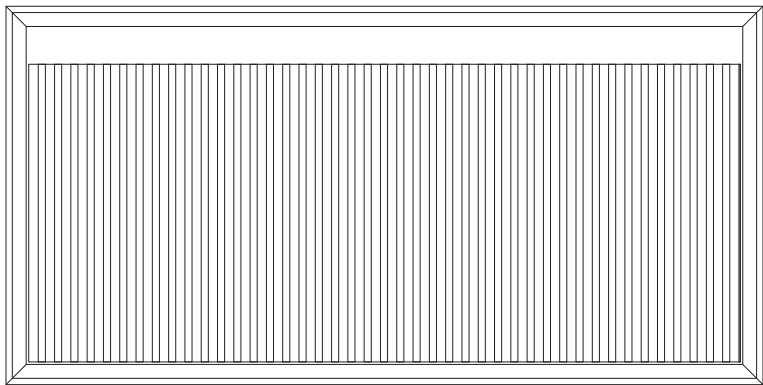

DECOWOOD®

The change
starts here.

