



1

Pre-cladding

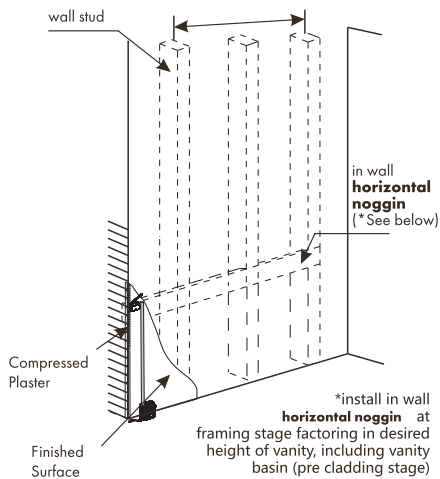

2


Post-cladding

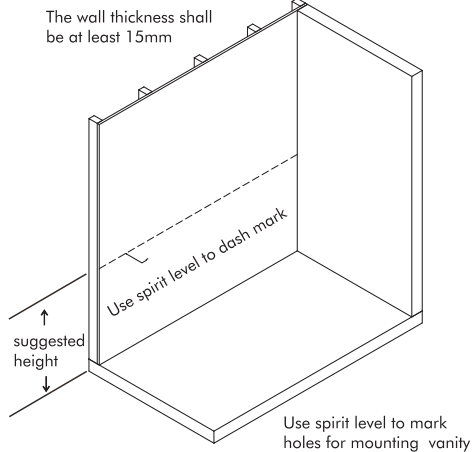


The suggested height with under counter basin is: 800mm
the suggested height with countertop basin is: 760mm

3 Remove all drawers by following the provided Installation Guide.


- ①

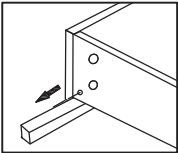

Firstly, Loosen screws(2 sides).
- ②

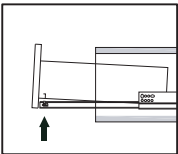


Pull up a little the drawer, make sure the metal bolt out of the pre-drilled holes.
- ③

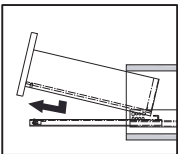


Pull out the drawer carefully to put the drawer at side.


4 The rubber cover mechanisms on both sides of the drawer can be removed by rotating them.

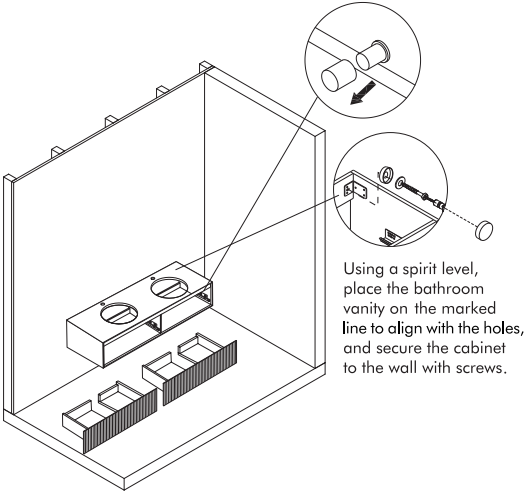


5 Install all drawers by following the provided Installation Guide.

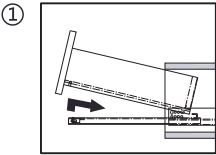

First, check that the pre-drilled holes on the rear of the drawer align with the metal hooks at the end of the drawer slides.

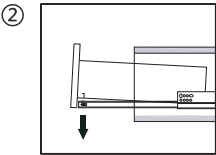


Then push the drawer upward toward the drawer base until the drawer slides click securely into the pre-drilled holes.

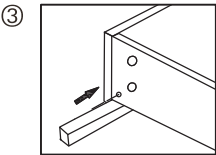


After installing the drawer, use a screwdriver to fasten the drawer securely to the metal slides.

6

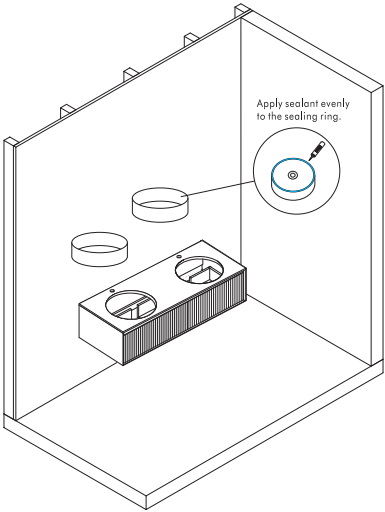

7

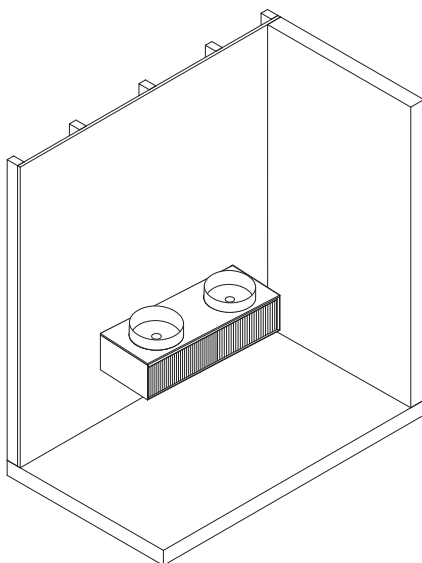

8


The unit must be sealed along the back edge of the top and down the sides against the wall with non acidic bathroom & kitchen silicone. -

9

When the silicone has dried, ensure you caulk around the basin.

10

The vanity is now ready for the tapware and waste installation.

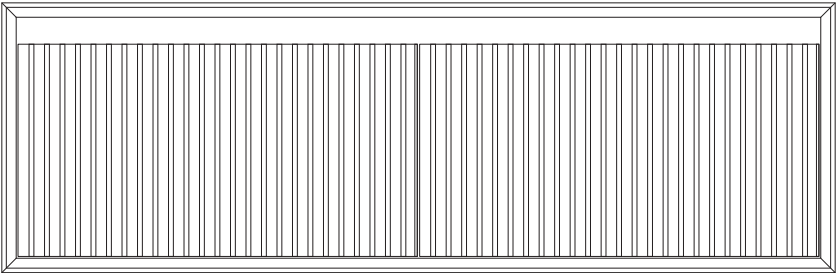

DECOWOOD®

The change
starts here.

