




10 min

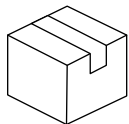


x2



x2




x1

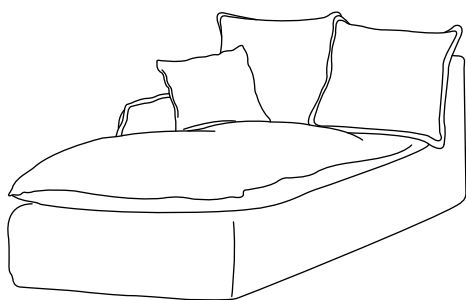


A x1




B x1




C x8




D x2

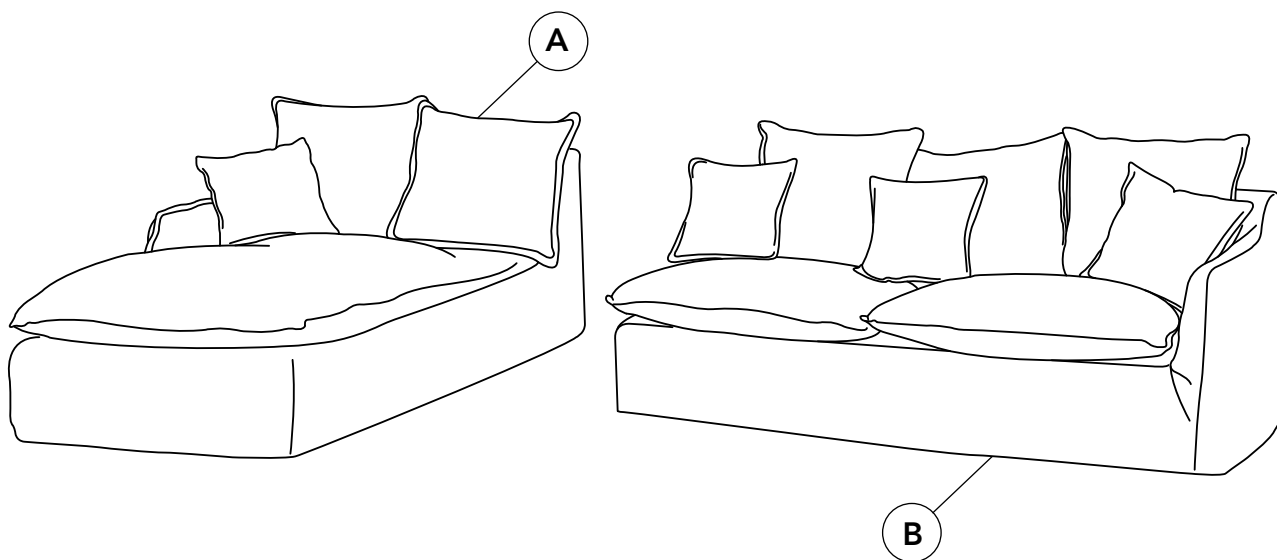


- 1 Desatornillar las patas preinstaladas (x8)
Unscrew the pre-installed legs (x8)

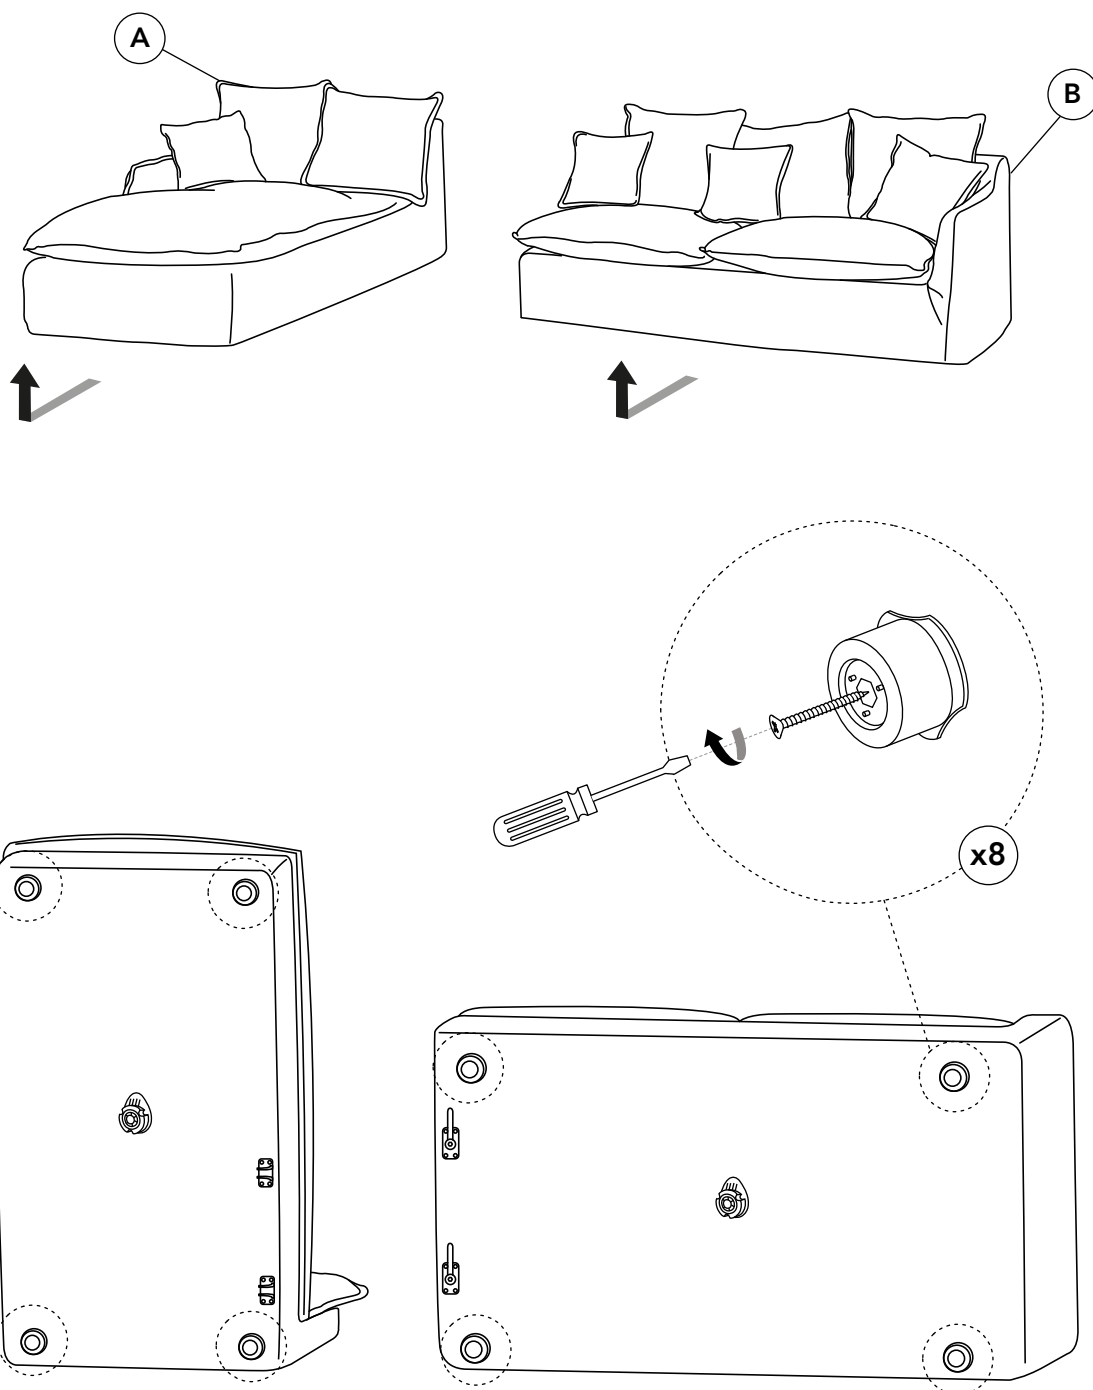



- 2 Atornillar las nuevas patas (C x8)
Screw in the new legs (C x8)

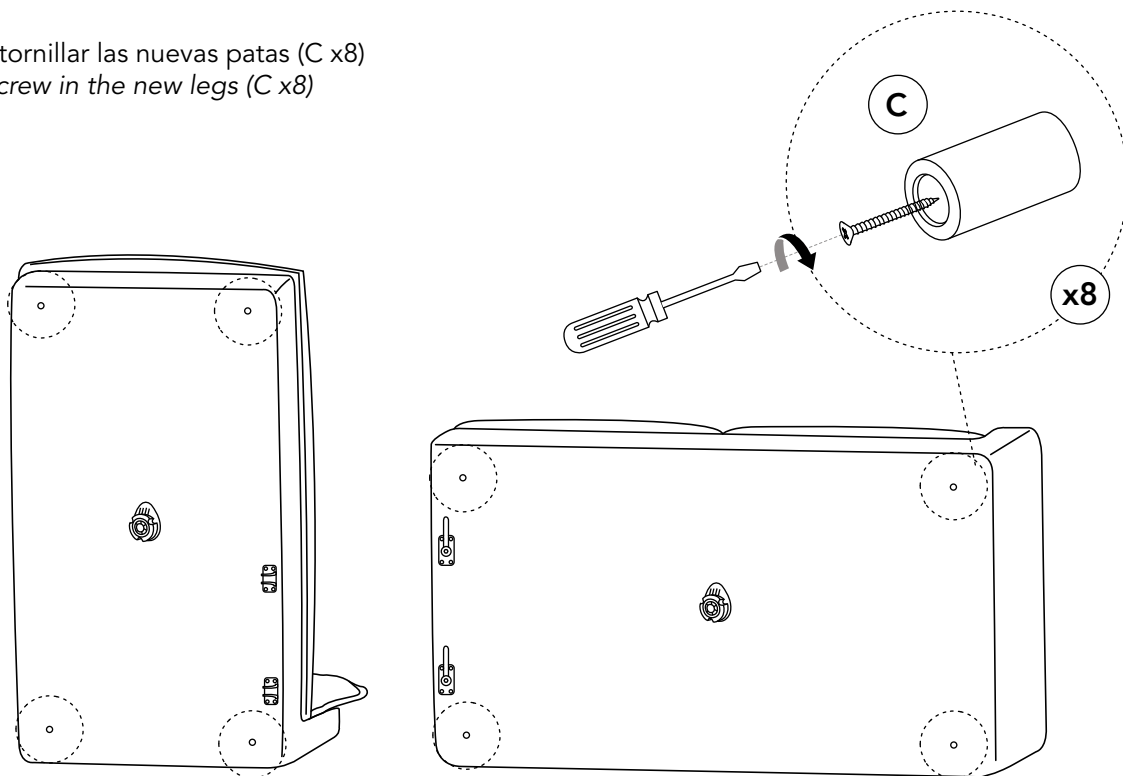



- 3

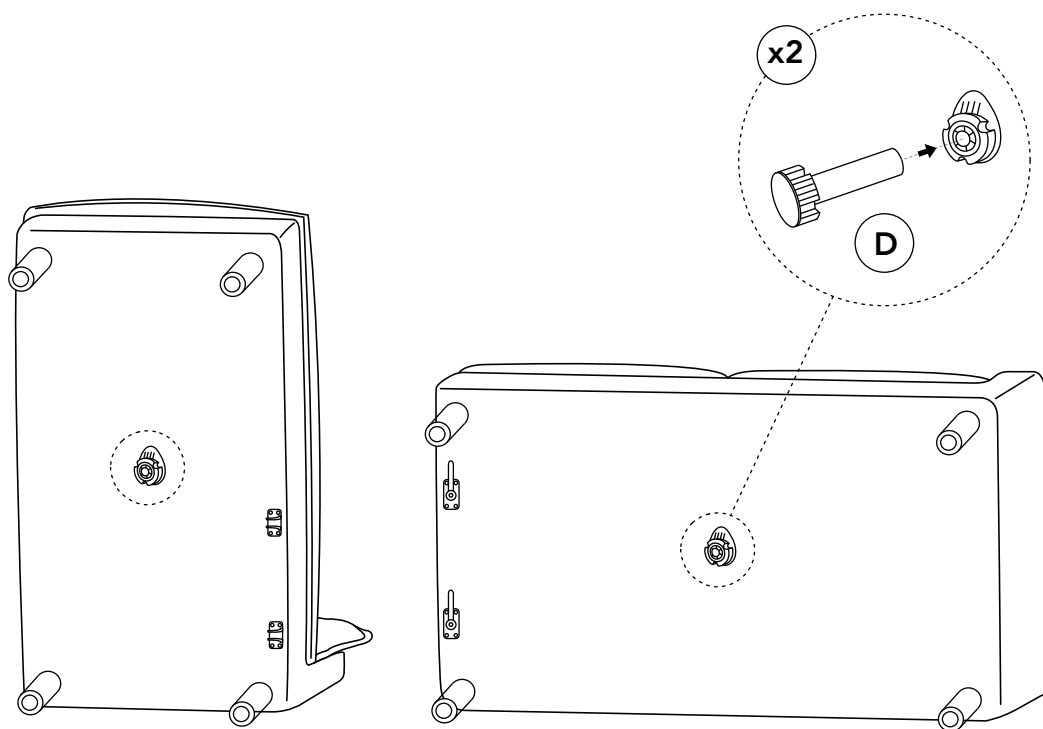


4

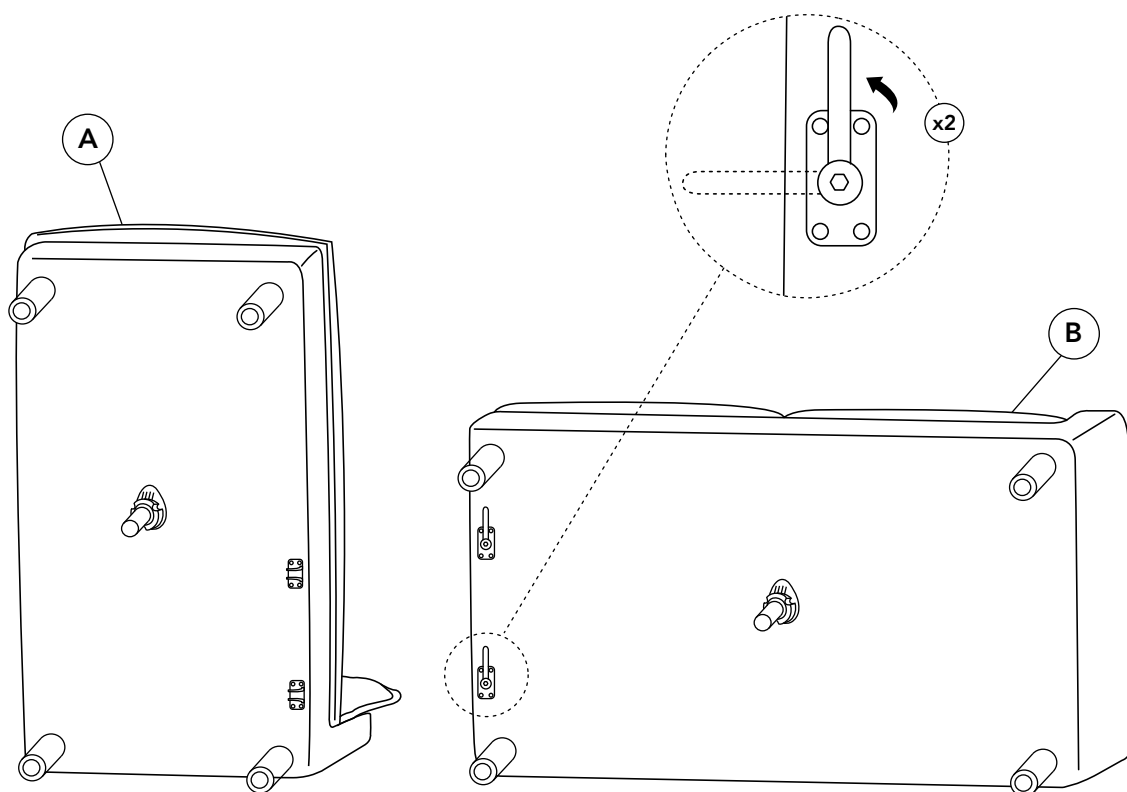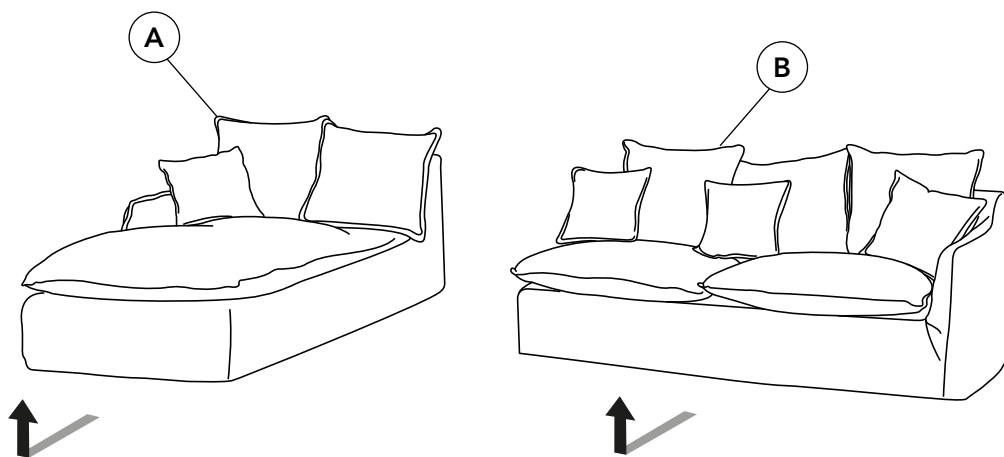

5

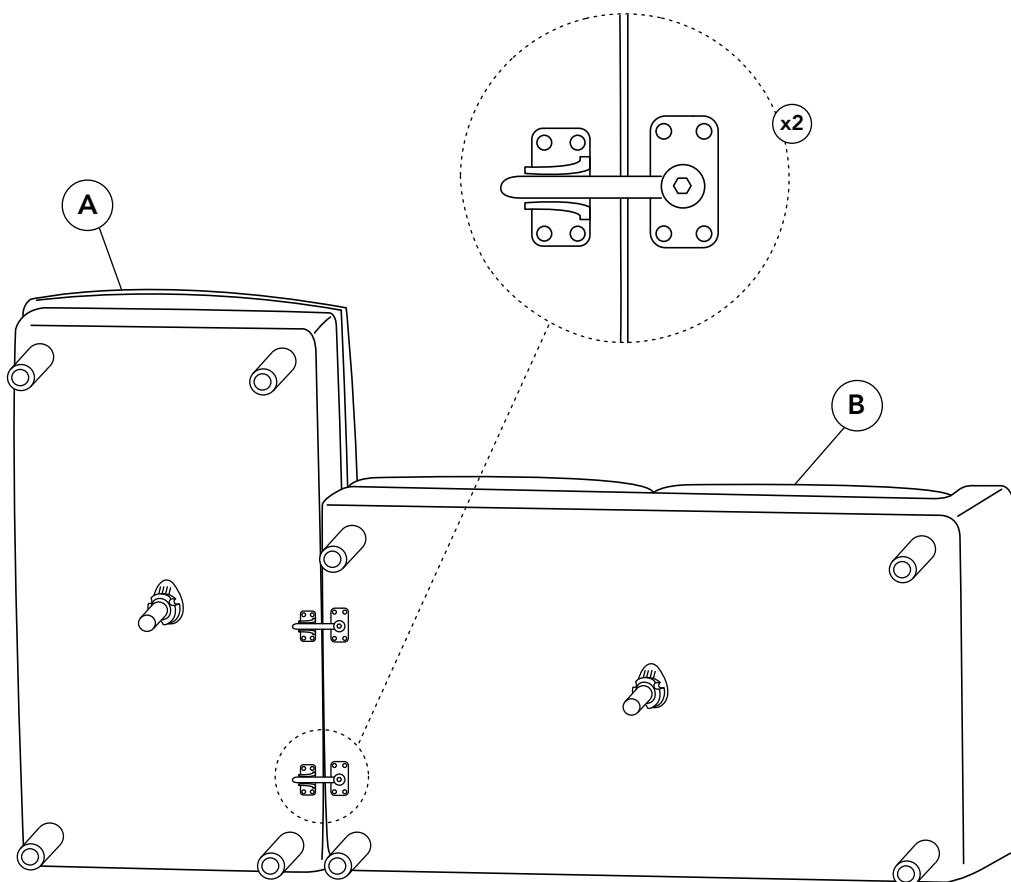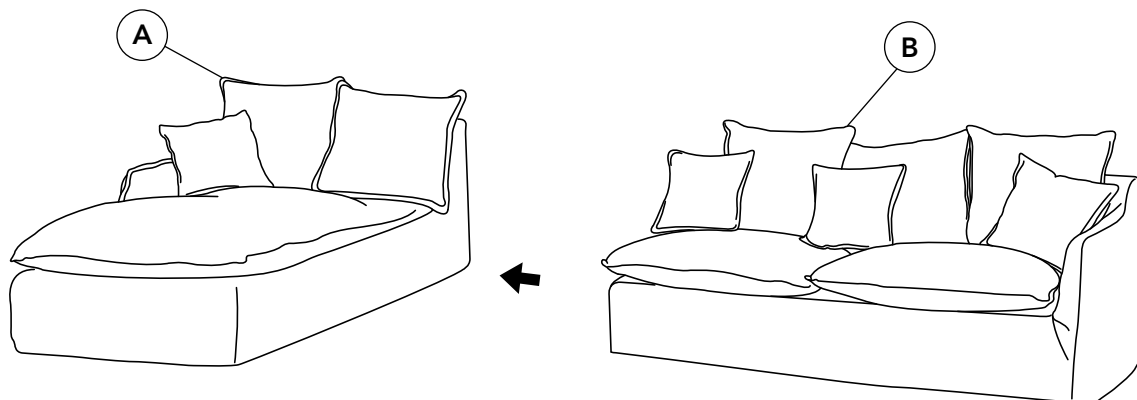

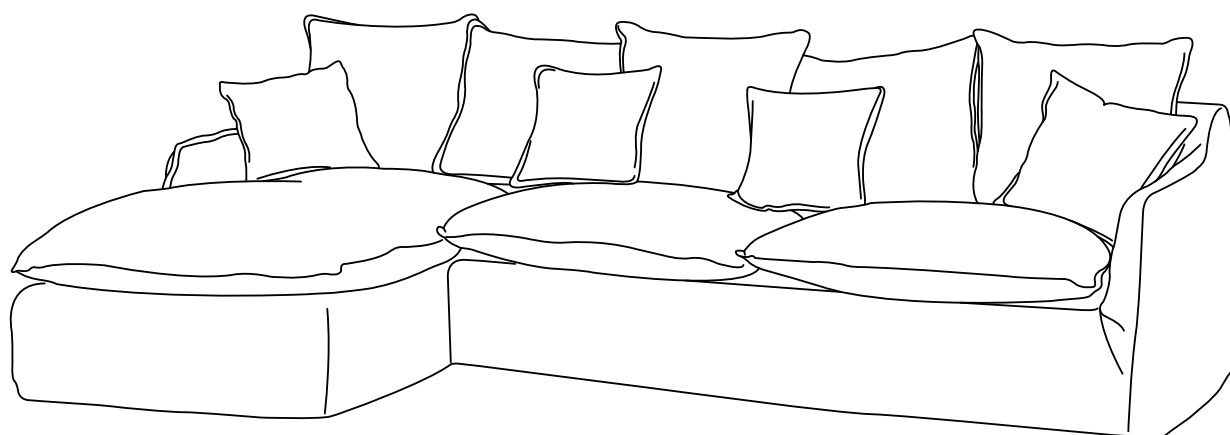

DECOWOOD®

**The change
starts here.**

