




10 min

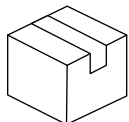

x2




x2




x1




A x1

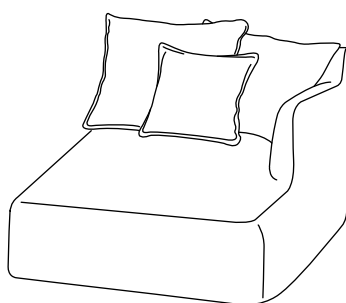


B x1

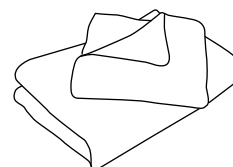


C x1







D x1




E x8




F x1

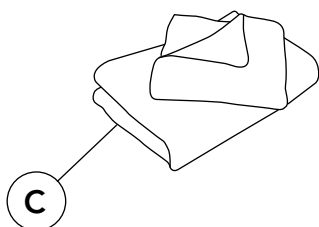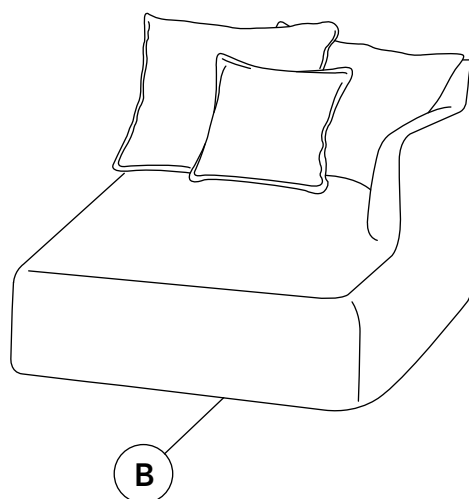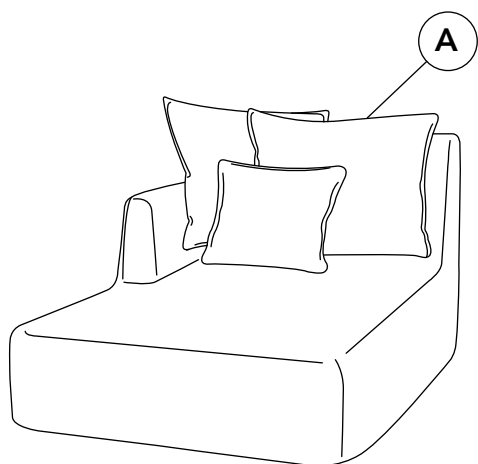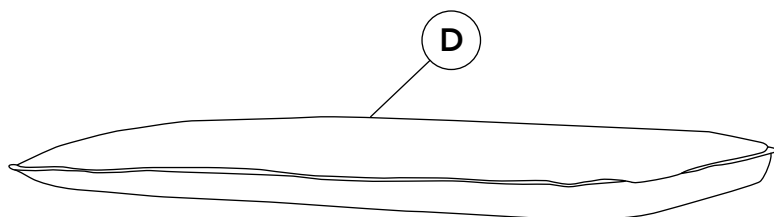


- 1 Desatornillar las patas preinstaladas (x8)
Unscrew the pre-installed legs (x8)

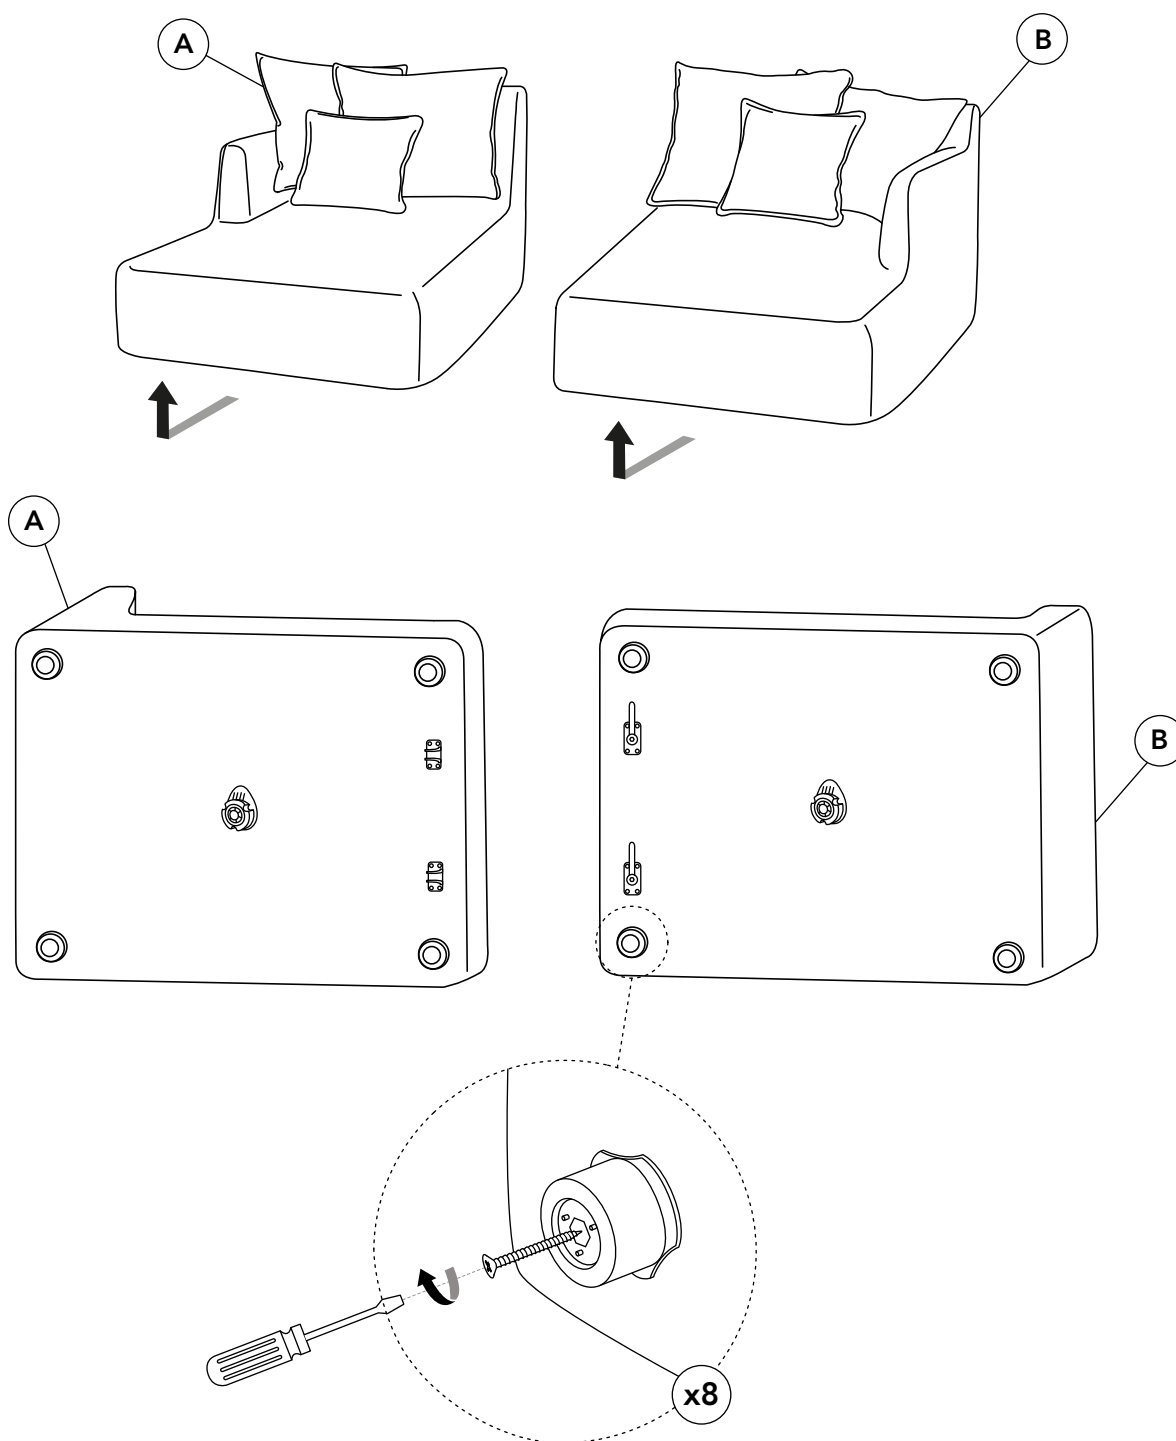



- 2 Atornillar las nuevas patas (E x8)
Screw in the new legs (E x8)

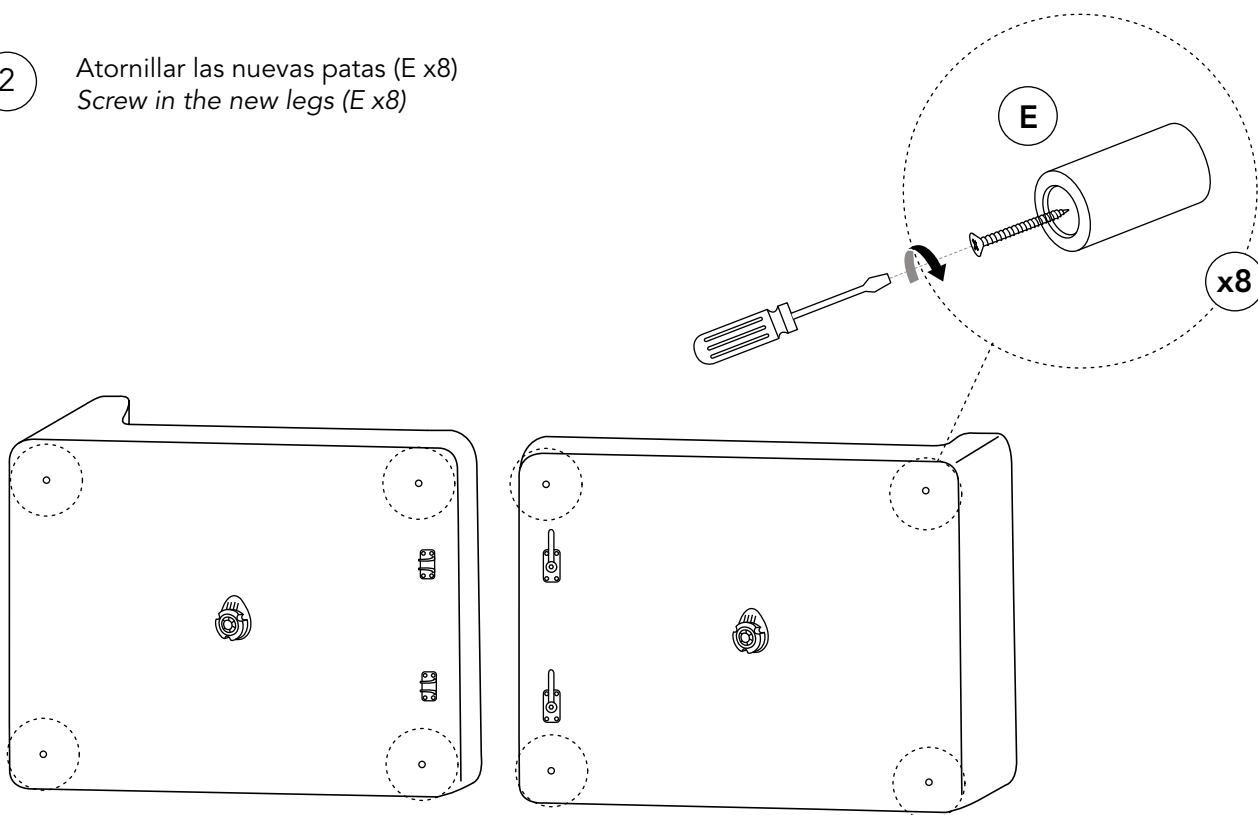



- 3

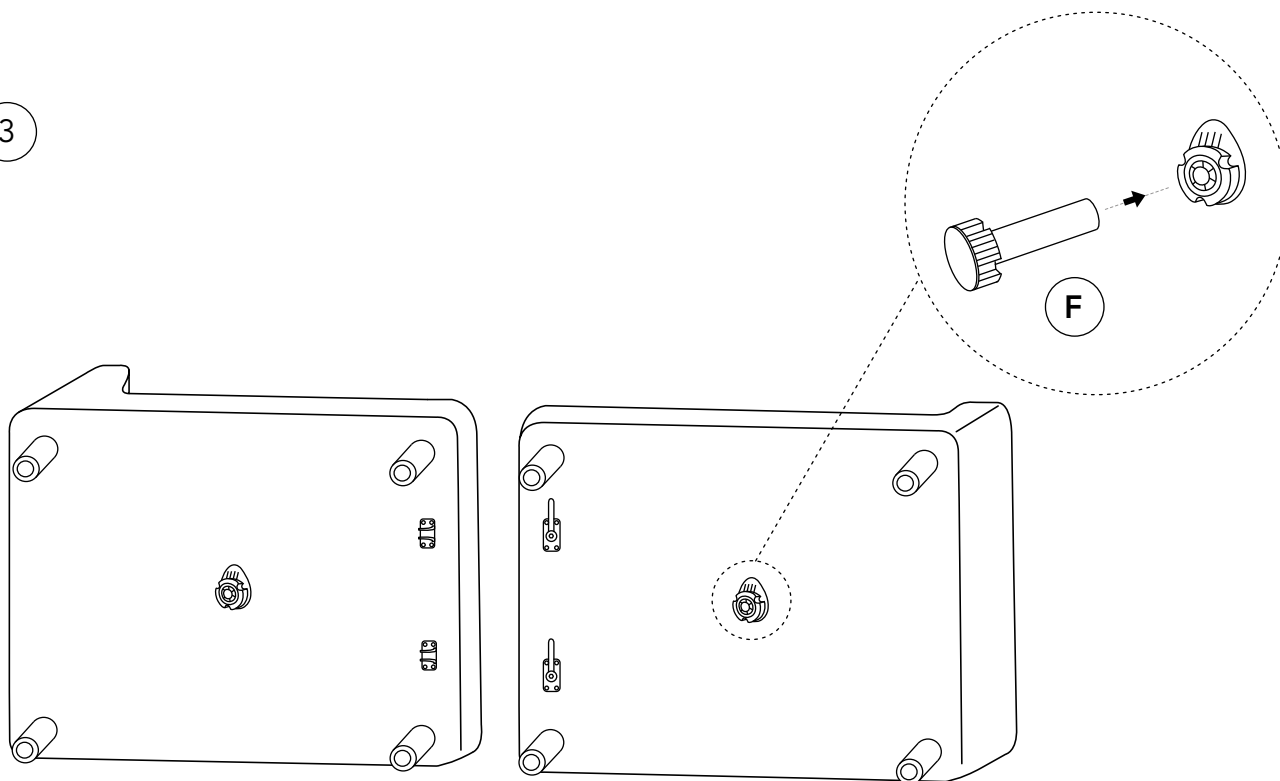


4

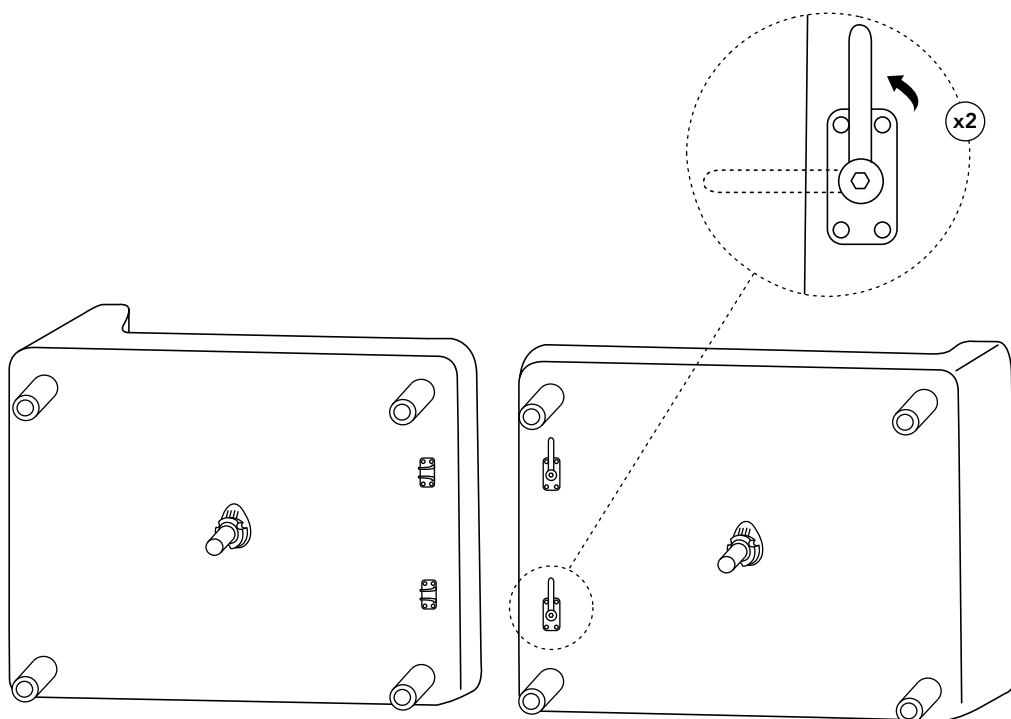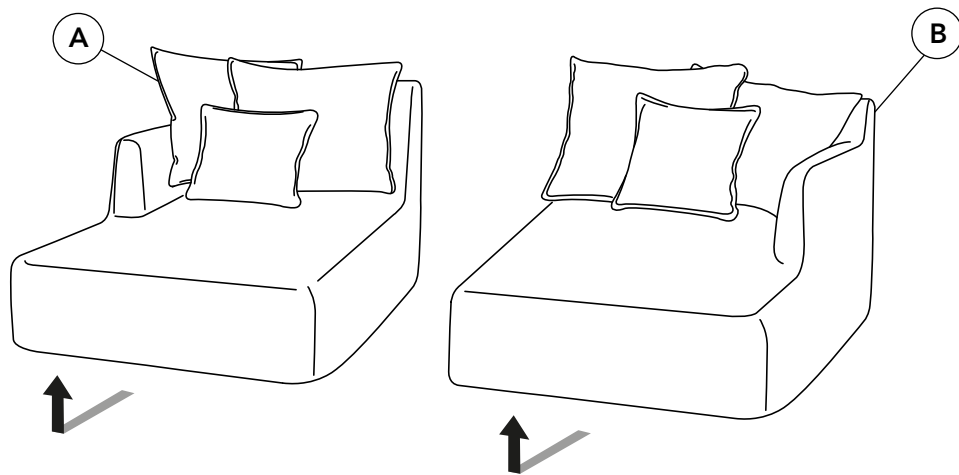


5

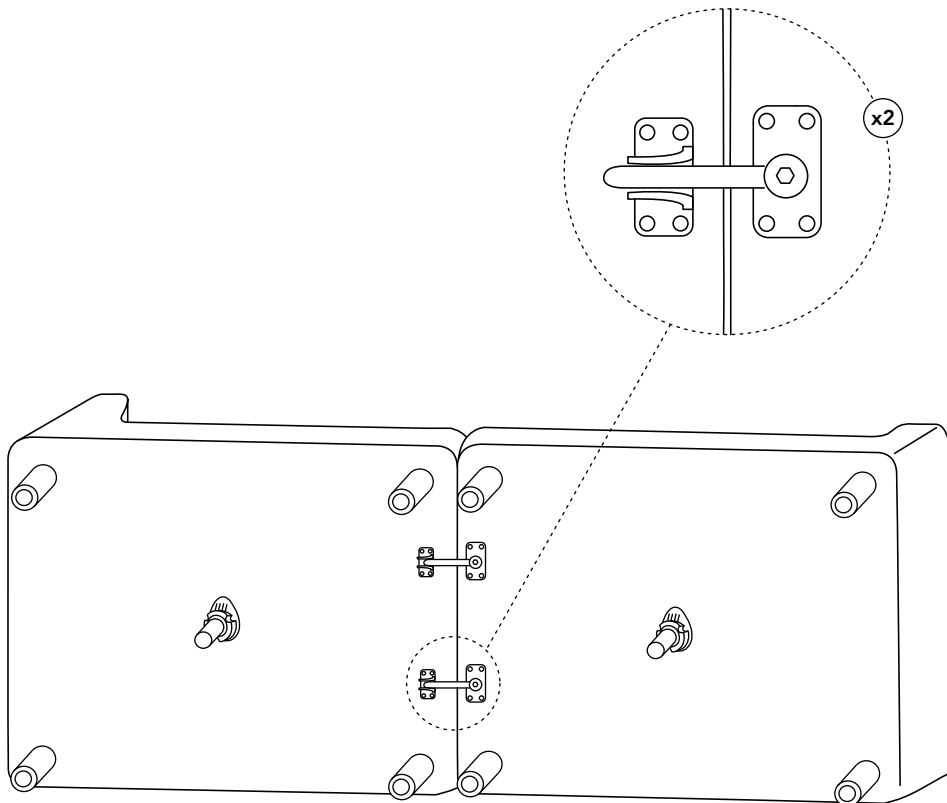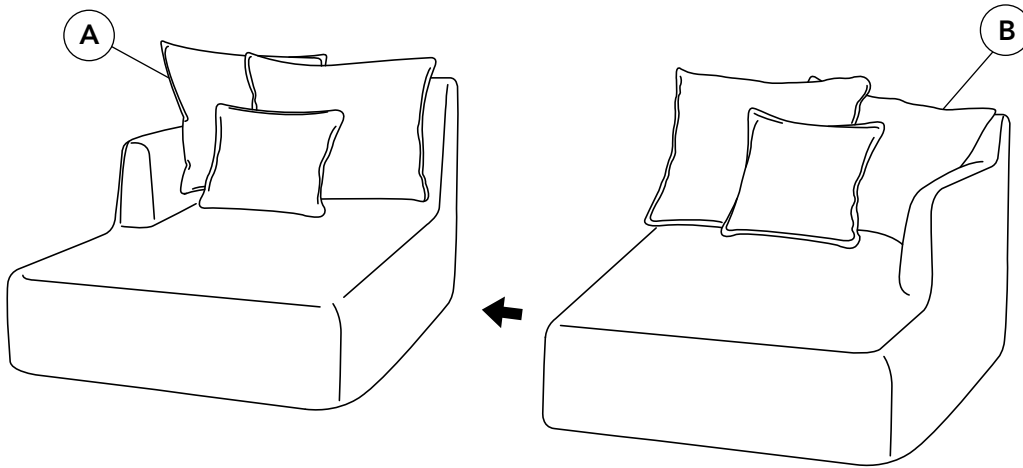

6

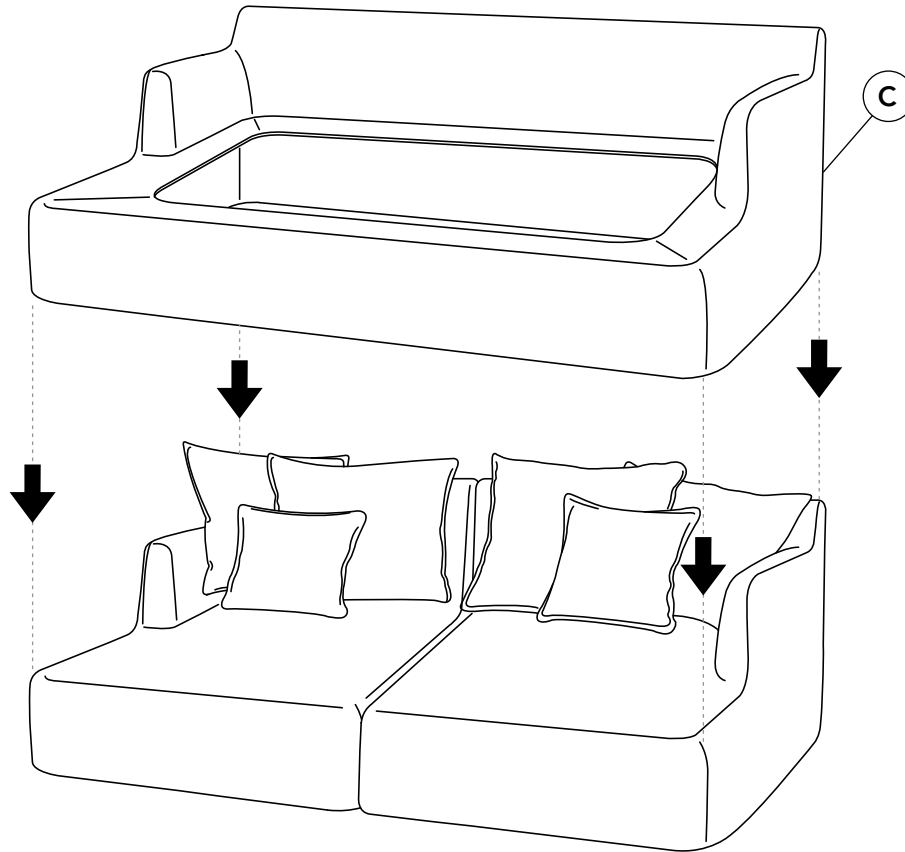

7

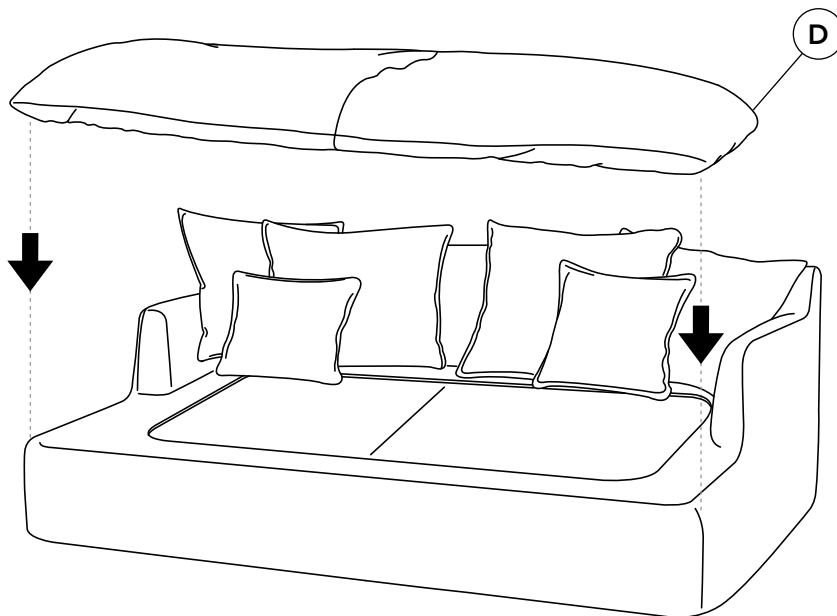



DECOWOOD®

**The change
starts here.**

