


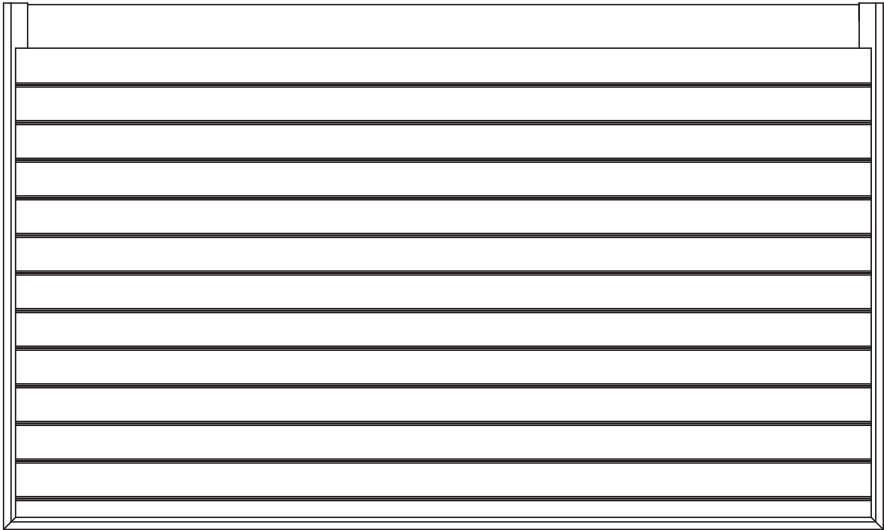
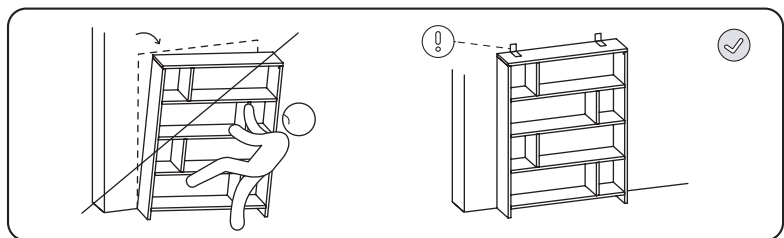
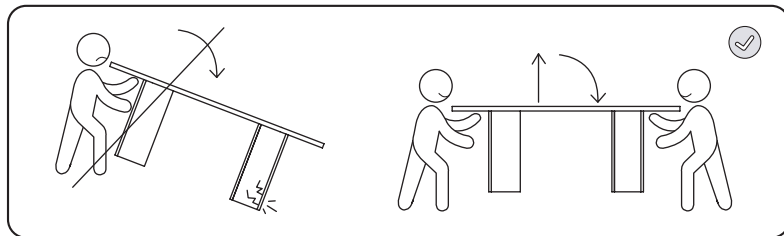
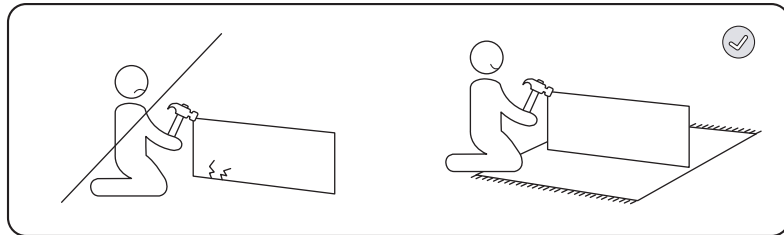


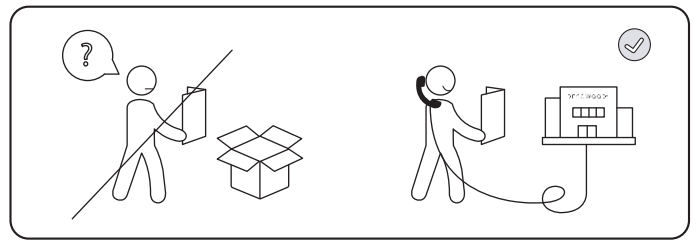

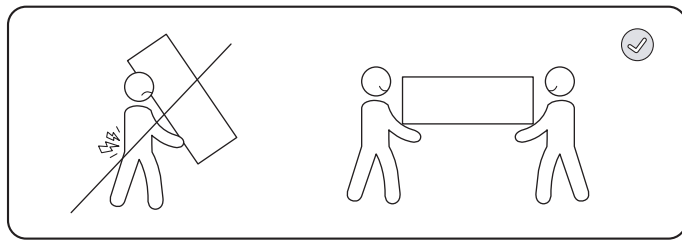


1

Pre-cladding

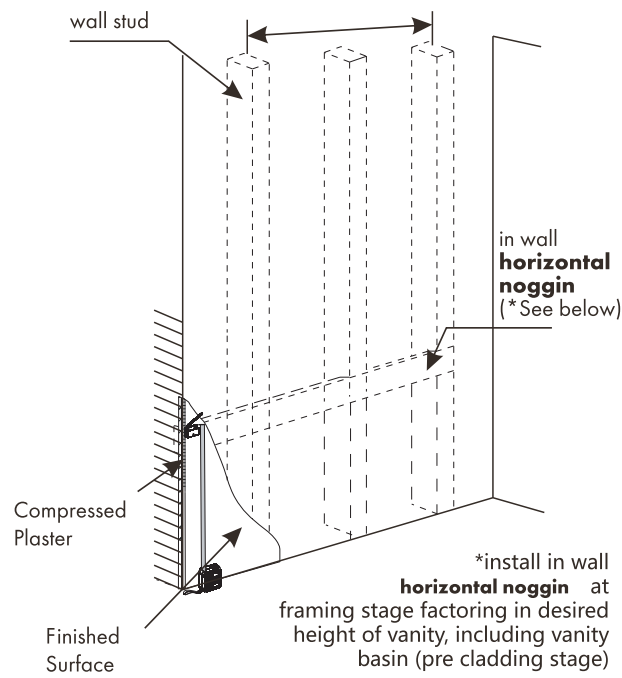


2

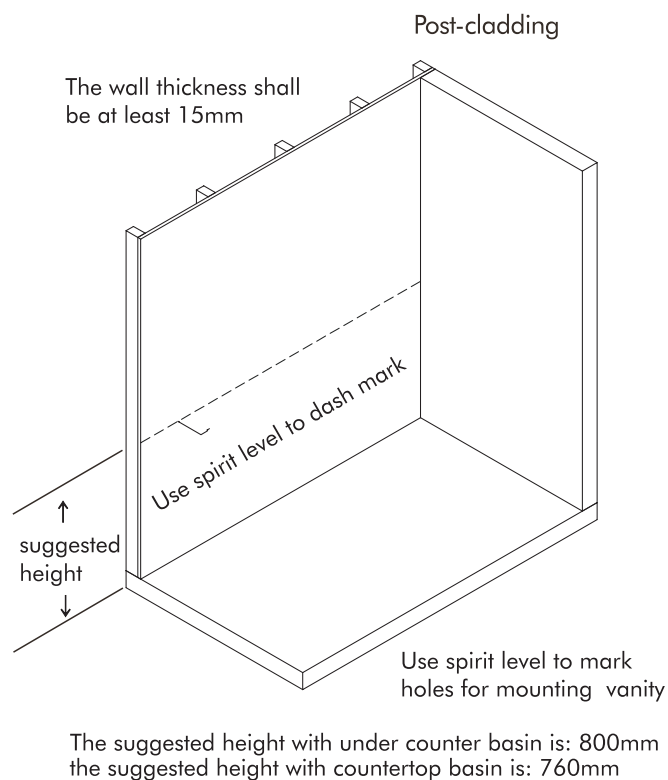


3

The Rubber cover mechanisms on both sides of the drawer can be removed by rotating them.

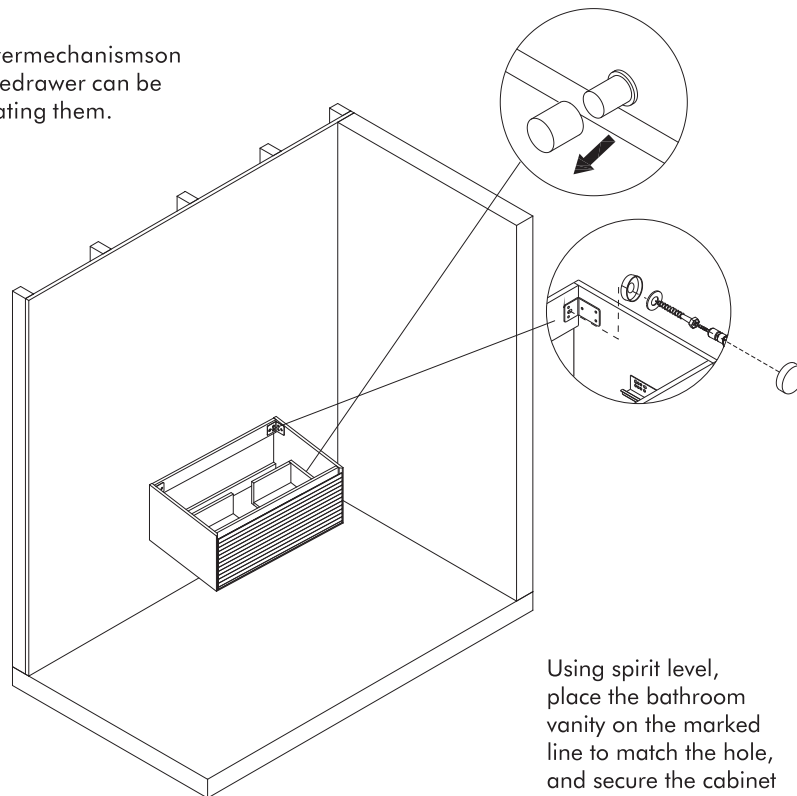


Using spirit level, place the bathroom vanity on the marked line to match the hole, and secure the cabinet to the wall with screws. Then adjust the drawers.

4

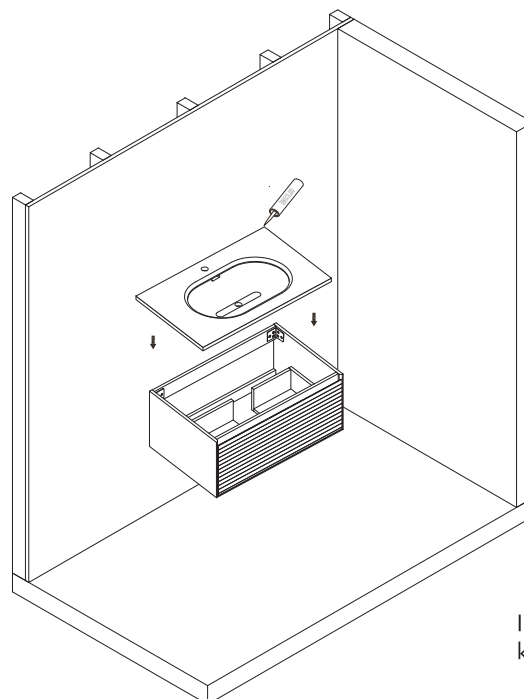

Install sink top with non-acidic kitchen & bathroom silicone

5

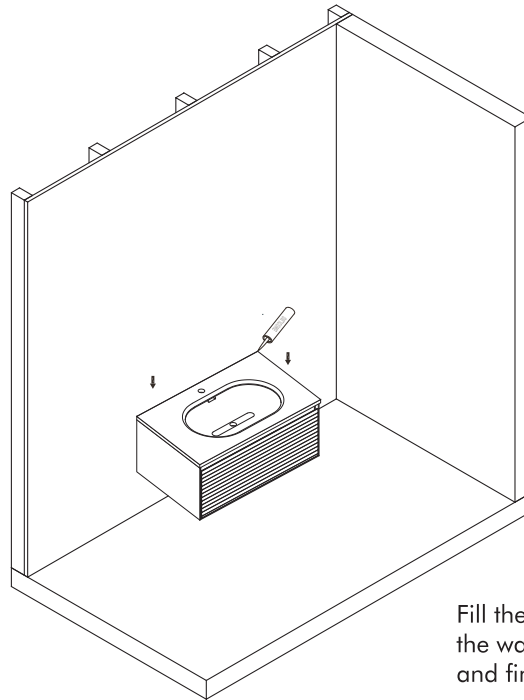

Fill the side against the wall with Silicone and finish

6

The unit must be sealed along the back edge of the top and down the sides against the wall with non acidic bathroom & kitchen silicone. Seal around the cabinet with silicone.

7

Please note when installing an undermount basin or counter basin onto a stone top, they must be siliconed on. When the silicone has dried ensure you caulk around the basin and stone top.


8

The vanity is now ready for the tapware and waste installation.


DRAWER ADJUSTMENT AND REMOVAL

DTC QUICK ASSEMBLY DRAWER SLIDE


Installation

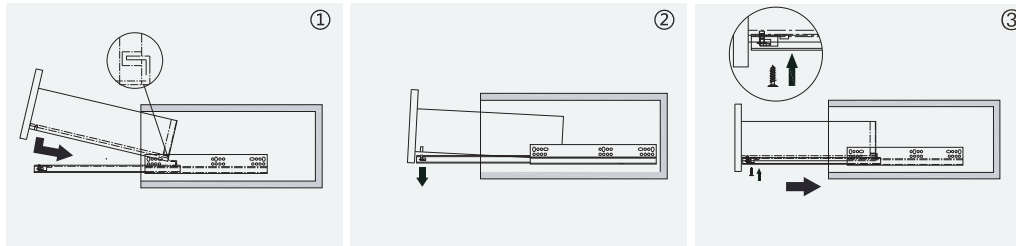


Removal

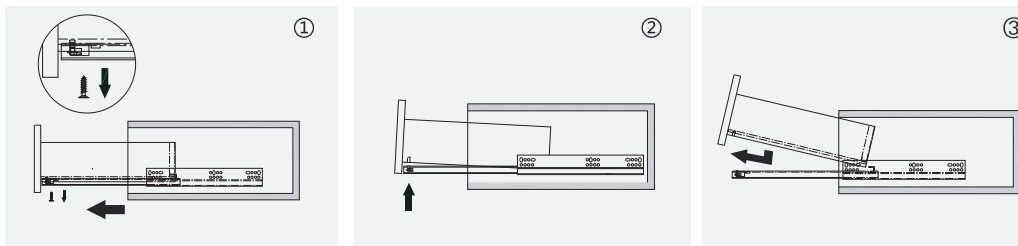

Adjustment

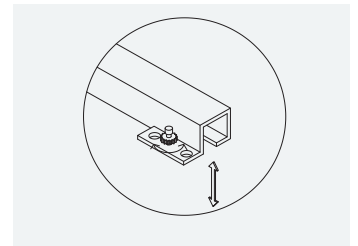

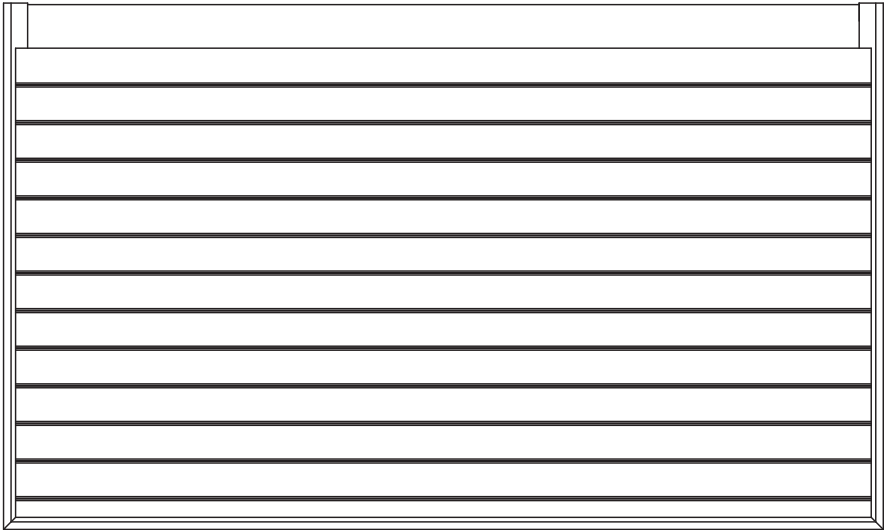

DECOWOOD®

The change
starts here.

